

**BLAUPUNKT**

User's Guide

Mobile phone BS 04



*Enjoy it.*

## Contents

General Information .....	1
1. Safety .....	2
2. Product specifications .....	4
3. About the keys .....	4
4. Getting Started.....	6
4.1. <i>Installation</i> .....	6
4.2. <i>Charging the battery</i> .....	6
4.3. <i>Maintaining the battery</i> .....	6
5. Use this unit .....	7
5.1. <i>Power On/Off</i> .....	7
5.2. <i>Make a call</i> .....	8
5.3. <i>Receiving Calls</i> .....	8
5.4. <i>Emergency call</i> .....	9
5.5. <i>Functions available during a call</i> .....	9
6. Main menu .....	10
6.1. <i>Phonebook</i> .....	10
6.2. <i>Messages</i> .....	13
6.2.1 Write a message .....	13
6.2.2 Incoming messages.....	13
6.2.3 Drafts .....	14
6.2.4 Outbox .....	14
6.2.5 Sent messages.....	15
6.2.6 Message settings .....	15
6.3. <i>Call logs</i> .....	15
6.3.1 Call history.....	15
6.3.2 Call settings .....	16
6.4. <i>Multimedia</i> .....	18
6.4.1 Camera .....	18
6.4.2 Image viewer .....	19
6.4.3 Video recorder .....	19

6.4.4 Audio Player .....	19
6.4.5 Video player .....	20
6.4.6 Sound recorder .....	20
6.4.7 FM Radio .....	21
6.4.8 File Manager .....	22
6.5. <i>Magnifier</i> .....	22
6.6. <i>Organizer</i> .....	22
6.6.1 Alarm .....	22
6.6.2 Calculator .....	23
6.6.3 Bluetooth.....	23
6.6.4 Calendar .....	24
6.6.5 Flashlight .....	24
6.7. <i>Settings</i> .....	24
6.7.1 Profiles.....	24
6.7.2 Phone settings .....	25
6.7.3 SOS function settings.....	26
6.7.4 Network Settings .....	27
6.7.5 Security Settings .....	27
6.7.6 Restoring settings .....	28
7. Declaration of Conformity .....	29

## General Information

Thank you for purchasing the product.

Our mobile phone meets the GSM network standards and the most stringent European standards.

This device can be used on various international networks, depending on the roaming rules of your service provider. To use the device, GSM service is required, provided by your service provider for a fee.

Many features of the device depend on the services provided by the network service provider.

For more information, please contact your service provider.

The user manual has been manufactured by the manufacturer and is not responsible for any printing, typing errors or changes, and may not be warranted to change the device without prior notice.

Copyrights, trademarks and copyrights mentioned in this document are the property of the current owner, copyrighted or partially copyrighted material is strictly prohibited without the prior permission of the holder.

We recommend that you read this guide carefully before using your device to use your device under the best conditions.

# 1. Safety

**Please read the safety instructions carefully, as ignoring it may be dangerous or illegal.**

The owner of the device is responsible for the use of this appliance.

## Explosion hazards and restricted areas

Turn off the device in explosion hazardous areas. Sparks in such places may lead to an explosion or fire that may result in serious injury or death. Turn off the device at gasoline or gas filling stations, especially near the fuel pumps. Follow the instructions strictly in locations such as fuel tanks, chemical plants, and explosive substances.

## Road safety

Observe the local laws and regulations regarding mobile phone usage while driving. If you make a phone call while driving, observe the following rules: Focus on driving to become aware of traffic conditions; if the device has a hands-free function, use handsfree. If the traffic situation requires, stop the car before you pick up the phone.

## Interference

Do not switch on the device, where it is prohibited to use a mobile phone or to interfere with radio waves.

## Qualified service

The product can only be repaired by a qualified person.

## Charger, battery and other accessories

Only use a battery, charger and other accessories approved

by the manufacturer. Do not connect incompatible products. The mains power socket used must be close to the charger/holder and easily accessible, so that it can be used as an 'on/off' facility.

#### Hearing protection

To avoid hearing loss, do not listen to music or radio for a long time at high volume.

#### Water resistance

The appliance is not waterproof, so keep it dry.

#### Use environment

The device complies with the recommended emission values for radio waves when kept at a minimum distance of 1.5 cm from the ear. When carrying the phone in a case, belt clip or holder, make sure that it does not contain metal and that the phone is slightly distracted from the body. When using other accessories, it is not possible to operate in accordance with radio frequency guidelines. If you do not use a case and do not hold the phone on your ear, keep it at least 2.5 cm away from your body, especially during data transfer.

## 2. Product specifications

The device handles a Micro SIM card.

**Power Supply Features:**

- Input: (AC), 100-240 V- 50/60 Hz – 0.1 A
- Output: (DC), 5 V- 500 mA – 2.5 W

**Battery Type and Voltage:**

- Li-ion battery, 3.7 V- 900 mAh

**Network type:**

- GSM 900/1800 MHz

**SAR values:**

- 0.375 W/Kg (Head)
- 1.058 W/Kg (Body)

Note: Actual operating conditions depend on local conditions, network environment, and user habits.

## 3. About the keys

**1. Right softkey:** In standby mode, enter Names. In Menu mode: to return to the home screen

**2. Left softkey:** In standby mode: enter the Main menu and select "OK" button in other menus

**3. Call (Dial) button:** Dialing and Receiving calls. In Idle mode, open the Call list

**4. Call End Button:** Press and hold to turn on/off the phone

**5. Navigation keys (scroll in the menu):** In standby mode,


various functions can be set in the directions.

**6. Flashlight button:** Turning the flashlight on and off.

**7. SOS:** In emergency, by pressing this button, alarms the previously set contacts for this function.

**8. Volume button:** Increase and decrease the volume during calls

**9. Alphanumeric keypad:** Press the corresponding keys to enter numbers when dialing or the characters of the numbers when writing text.

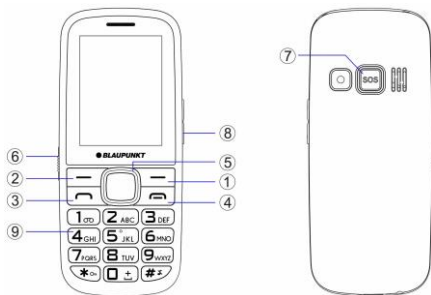



## 4. Getting Started

### 4.1. Installation

1. Open and remove the phone back protection cover
2. Insert the SIM into the device. The golden contacts on the SIM card face down and the edges align with the corresponding edges of the SIM card.
3. Insert the battery chip into the protruding metal point in the battery slot, insert the battery, and push the top down until the battery engages in the recess.
4. Put back the back cover.

### 4.2. Charging the battery

Connect the charger to the appliance and plug the other end into the socket. If the device is turned on while charging, the battery icon will move in the right corner of the display. Charging is completed when the charging indicator on the top right is lit. If charging is switched off, a charging indicator appears on the display. When charging is complete, unplug the charger from the unit.

Note: When the battery voltage is low, a warning message is displayed on the display. Charge the battery as soon as you can, to avoid any inconvenience, the device can be switched off during a telephone conversation. Your device can automatically turn off when the power level is too low.

### 4.3. Maintaining the battery

The device has a rechargeable battery. When not using the charger, disconnect it from the power source. For more than a week, do not leave the phone charging. Temperature

influences battery capacity. Battery may need to be cooled or warmed up before charging. If the battery temperature is lower than 0 ° C or higher than 45 ° C, do not charge the battery. Use the battery according to its intended purpose. Do not short-circuit the battery terminals. Do not use a damaged battery. If you are using an appliance under extreme temperature conditions, the battery will not work properly and its life span will be reduced. DO NOT throw the battery into fire, follow local laws and regulations regarding the disposal of the spent battery.

## 5. Use this unit

### 5.1. Power On/Off

Press and hold the End / On-Off button to turn the unit on or off.

1. If a SIM card is not inserted, it is defective or not fit correctly, a warning message will be displayed after switching on the display. Turn off your readiness and make sure the SIM card is inserted correctly.

2. If you insert the SIM card into the device, the PIN request and the phone password are active, the device prompts you for the password and PIN code and switches to standby mode. After switching on, the phone automatically searches for the network. If the device has found the allowed network, it will display its name and signal strength.

If your device does not find a suitable network, you can only make an emergency call or access non-network services on your phone

## 5.2. Make a call

### 5.2.1 Starting a domestic call

In Idle mode, press the number keys to enter the number you want to call, press the right soft key to clear the wrong numbers, press the left soft key (Options), then Call or the dial key to start the call if the specified number is correct.

### 5.2.2 Starting an international call

To make an international call, press and hold the [0] key until "+" international call sign appears on the display.

After entering the country call, enter the area code and then the phone number.

You can make an international call as follows: "+" Sign, country calling- full phone number dialing button.

## 5.3. Receiving Calls

When you have an incoming call, your device will respond properly if your service provider supports the number display, then the caller or caller name appears on the display (depending on whether you have saved it in the phone book).

1. Press the dial key or the left soft key and answer [Answer] to the incoming call.

2. If any button responds to the function, [Menu / Call logs / Call settings / Advanced Settings / Answer Mode / Anykey], you can answer any call using any key except the Right softkey and the End / Off button.

3. When the headset is connected to the unit and [Auto] is activated [Menu / Call logs / Call settings / Advanced Settings / Answer Mode / Auto answer when headset mode],

incoming calls are automatically received by your phone after 5 seconds of vibration or ringing.

4. If you do not want to answer the call, press the End / Off button to reject the call.

The Right softkey button can also be used to disconnect the call.

5. During a call, you can use the volume keys on the side of the machine to reduce or increase the loudspeaker volume.

#### **5.4. Emergency call**

You can immediately make an emergency call without a SIM card. Different networks can use different emergency numbers, so please contact your network operator.

#### **5.5. Functions available during a call**

Some operations and services are available during an active call. Many of these depend on network support, please check with your network service provider for these options.

Press the right soft key to activate the loudspeaker during an active call; Similarly, you can reset the call to the handset.

Press the left soft key [Options] to access the call during the active call in the menu, these are the following (some functions can only be used under special conditions):

Hold / Continue: Hold an active call or keep it from hold.

End single call: Hang up the current call.

Phonebook: Displays the search, add contacts, and other phonebook functions.

Call history: view call history.

Messages: You can enter the messages menu.

Mute: You can mute your device's microphone when you need to make a conversation while you are on the call so that someone on the other side of the line does not hear it.

End all calls: \* Hang up all calls

Transfer: \*Transfer the active call and exit from the conversation.

Swap: \* You can exchange the held and active calls.

Conference \*: Combine calls.

Split: \* Separate the conference call.

End conf. call: \* Hang up the conference call.

Note: The menu items marked with [\*] only work under special conditions. Such as: "Swap", which can only be achieved if one of the calls is held on the other active. To access the conference call, you need a service that you can activate with your network operator.

## 6. Main menu

### 6.1. Phonebook

In Idle mode, use the right soft key to enter Names or to access Menu> Phonebook. You can store and edit frequently-dialed contacts in the phonebook. You can save the numbers and names you frequently use to the SIM card and the device too. The number of contacts that can be stored on the SIM card depends on the card's capacity. You can store up to 300 contacts in phone memory. When you enter the phonebook, you can view all the contacts (stored on the SIM

card and on your device). Various icons indicate which contact is saved for which storage. You can search for that contact by entering the first letter of the contact. After searching for a contact, you can dial the number by pressing the Dial button and press the End call button to disconnect the line.

### Add new contact

In Standby mode, enter the phone number and select (left) Options> Save to Phonebook.

Select storage space (SIM or Phone) to save the phone number.

Enter contact details: name, phone number.

To save, press the Options (left) soft key and select Save.

Press Options (left soft key) to select one of the following options:

- **View:** You can view the details of that contact.
- **Send SMS:** Send a text message to the selected contact's phone number.
- **Call:** Call the selected phone number.
- **Edit:** Edit the selected contact.
- **Delete:** Deletes the selected connection.
- **Copy:** You can copy the selected connection from the device to the SIM card and vice versa.
- **Move:** Move the selected contact from the device to the SIM card and vice versa.
- **Add to blacklist**

## ➤ Phonebook settings

- **Preferred storage:** You can select whether the phone or SIM card (or both) should be the default save location for new contacts.
- **Speed Dial:** You can set frequently dialed numbers to the numeric keys on your machine, so you can make calls to these numbers at the touch of a button. To set up speed dial, go to Menu> Phonebook > Phonebook settings> Speed Dial. In the Status menu, turn on the function by pressing OK (left soft key), then selecting On. In the Set Number menu, set a number for the different (2-9) keys. Key 1 dial the voicemail number (if previously set).
- **Memory status:** view the number of contacts stored on the device and the SIM card, and how many contacts can be stored. The storage capacity of the SIM card may vary by card type.
- **Copy contacts:** Copy the selected contact from SIM card or Phone
- **Move contacts:** Move the selected contact from SIM card or Phone
- **Delete all contacts:** Delete all contacts from SIM card or Phone

## 6.2. Messages

Message service is a network-dependent service that allows you to send and receive SMS. For more information, contact your network provider.

### 6.2.1 Write a message

In Menu mode, select Messages> Write message.

Note: To send the SMS, you must have the correct message center number from your network service provider. You can check and change the message center in Menu > Messaging > Message settings > SIM > Profile settings >.

While writing a message, press # to switch between input modes.

Press the left soft key [Options] during message editing to access the following functions:

**Send to:** You can specify the recipient of the message manually or select it from Phonebook.

**Input method:** Select the correct input method.

**Writing language:** Select the message language.

**Advanced:** You can insert name or phone number from the Phonebook

**Save:** Save a message between drafts.

### 6.2.2 Incoming messages

You can store received messages on your device or on the SIM card and access it.

When you receive a message, a beep or vibration (as previously configured in the menu) ([Settings / Profiles /



Options / Customize / Message]) will alert you to this or a graphic will appear on the display. Press the left soft key [View] to view the message, and the right soft key to return to the SMS menu to read other incoming messages.

If the SMS memory is full, you will see a "Memory full" indicator on the display and the SMS icon flashes. Before you can receive a message, delete some of the older ones. If the size of the new message exceeds the capacity of incoming messages, the information may be lost or incomplete.

In the message list, press the left soft key [View] to view the message. Pressing the left soft key [Options] repeatedly lets you choose:

- **Reply:** You can reply directly to the message.
- **Call sender:** Call the sender directly.
- **Forward:** Forward a message to another recipient.
- **Delete:** Deletes the message
- **Delete all:** Delete all messages
- **Save to Phonebook:** Save the senders phone numver

### 6.2.3 Drafts

You can view unfinished messages in this folder.

### 6.2.4 Outbox

When [Save sent SMS] is activated, unanswered messages are saved in this folder.

In the messages list, press the View soft key (left soft key) to read the selected message.

## 6.2.5 Sent messages

If the message is sent, the sent message is saved in the Sent Items folder.

## 6.2.6 Message settings

You can modify and save SMS service parameters on your SIM card:

**SIM** menu item:

- Profile name: profile name, SMSC address.
- Validity period
- Delivery report
- Voicemail server

To validate the changes, press the left soft key [Save] or Options> Save.

To save outgoing SMS, you can activate the Message settings / Sent SMS save / On option. In SMS settings, you can save messages (Preferred storage) to your device or SIM card, or check SMS memory status and SMS counter.

## 6.3. Call logs

### 6.3.1 Call history

The machine logs missed calls, dialed calls, received calls, and their dates. You can only log calls if these features are supported by the network.

You can access the call history in standby mode by pressing the Dial key or Menu > Call logs > Call history.

- Missed / Dialed / Received / All Calls

Displays the list of Missed / Dialed / Received / All Calls

- Delete call history

Deletes the list of Missed / Dialed / Received / All Calls.

To call a selected phone number, press the Dial button once in the call log list. To view the details of the call, press the left soft key (Options) to access the following functions:

- View: View the details of the call.
- Call: You can make another call to that number.
- Send SMS: Send a text message to that number.
- Save to phonebook: saves that number in the phone book (only this option is displayed for unsaved phone numbers).
- Add to Blacklist: Adds the selected number to the blacklist
- Editing before call: You can edit the number before dialing.
- Delete: Deletes the call details you have.

### **6.3.2 Call settings**

In Menu > Call logs > Call settings, You can choose the following options:

#### **Call Waiting**

(Depends on network support): Turn on or off or answer the Call Waiting status.

When the phone is switched on, an alert is heard during a call, if it is called by another person, and the display shows the caller's number or name (depending on whether you have saved it in the phonebook).

## Call divert

(depends on network support): Divert calls divert incoming voice calls to voicemail or other phone numbers, depending on the setting. The redirection may be unconditional [All voice divert redirection] or conditional (redirect if not available; redirection if no response; redirection if busy). Use the up / down arrows to select the appropriate divert type from the list, press the OK button or the Left soft key [OK] to select one of the following options:

- On: Switches the incoming call to a new number or Voicemail (by type):
- For a new number: Use the up / down navigation key to select this line, then use the left soft key or OK to enter it. Enter the full phone number to which you want to divert incoming calls.
- To voicemail: If you have a voicemail, pressing the OK or Left soft key [OK] will cause the conditional or unconditional redirection to the voicemail if you have previously set your voicemail number in Menu> Messaging> SMS Settings> Voice Mail Server.

## Call barring

You can restrict calls on your device. The following options available in the menu: Outgoing calls, Incoming calls, Cancel all, Change barring password,

### Advanced settings:

- Blacklist: You can add numbers to the blacklist that you will not be able to receive while you are in the list.
- Auto redial: When the function is active and the called

party is busy, the machine automatically attempts to call again after a while.

- Call time display
- Call time reminder: indicates a preset time (or time interval) when the phone is ringing during a call.
- Answer Mode: You can set whether or not to receive the call or headset mode with any key.

## 6.4. Multimedia

### 6.4.1 Camera

Your device has a camera for taking photos. Go to Menu > Multimedia > Camera. To take a photo, press the middle navigation key.

In Photo Preview mode, you can choose from the following options by pressing Options (left soft key) in the popup window:

#### **Switch to video recorder**

**Photos:** Opens saved photos.

**Camera Settings:** Use the Up / Down Navigation Keys to move between Anti-Flicker, Scene Mode, White Balance, Delay timer. To save the changes, press Save (left soft key).

**Image Settings:** In this menu, you can adjust the image size and picture quality.

**Restore default:** Reset the camera settings to the factory settings

Attention! To save the images, you need a memory card.

## 6.4.2 Image viewer

In this menu, you can view the images saved on the memory card. Press OK in the selected image, then Options (left soft key) to access the following functions.

**View:** view the selected image.

**Browse style:** Choose from matrix and list view.

**Send:** Send selected image via bluetooth.

**Use as:** set photos as wallpaper.

**Rename:** You can change the name of the image.

**Delete:** Deletes the current image.

**Delete all files:** Deletes all images.

**Image information:** Here you can see the details of the picture, such as: resolution, size, creation time.

## 6.4.3 Video recorder

Insert a memory card to make a video recording. Go to Menu> Multimedia> Video recorder. To start recording, press the middle navigation key. You can pause the recording by pressing the button again. To stop, press the right soft key.

By pressing the options (left soft key), the following options are available:

**Switch to Camera**

**Video recorder settings:** Anti-flicker

**Video settings:** In this menu, you can adjust the video quality.

## 6.4.4 Audio Player

On the player interface, press the middle navigation button

to select / play / pause the Left and Right navigation buttons to move to the previous / next / audio file. You can adjust the volume using the volume key on the side of the device.

Using the left soft key [List] you can enter the playlist by pressing the left soft key [Options] again to access the player program: Play, Add, Remove, Remove all, Settings.

In Settings, you can set Repeating, Shuffle, Background playing.

### **6.4.5 Video player**

This menu item allows you to play video clips stored on a memory card.

Press Options (left soft key) to access the following functions on the selected video:

Playback: Plays the video, press middle navigation key to start playback, then press this button to pause. Press the Left and Right buttons to move between the videos in the playback view. For full screen play, press the up navigation key, the down navigation button to stop.

Send: You can send the video via Bluetooth.

Rename: You can change the name of the video.

Delete: Deletes the selected video.

Delete all: Deletes all video

### **6.4.6 Sound recorder**

You can make voice recordings with the voice recorder.

Select Options (Left soft key)> "New record", press the left soft key to pause the recording, stop the recording with the

right softkey, the recording will be saved and a warning message will appear on the display.

After recording, you can access the following options by pressing the Left soft key [Options].

- New Recording: Create a new recording.
- List: To view the list of recordings, use the Options (left soft key) to select from the following options:
  - o Play: Play back the current recording
  - o Rename: You can change the recording name.
  - o Delete: Deletes the selected recording.
  - o Delete all: Deletes all selected recording.
  - o Send: You can send the video via Bluetooth.

### **6.4.7 FM Radio**

In Menu mode, go to Multimedia > FM radio. To connect to a radio, connect the headset, which acts as an antenna. If you do not connect a headset to your device, you may not be able to receive radio reception or in very poor quality.

In the FM radio application, press the middle navigation button to play / pause, the Up and Down navigation buttons to move between the channels. Use the buttons on the side of the device to adjust the volume.

Note: 1. If the Background play feature is active, you can also listen to the radio in standby or menu mode. You can also listen to the radio with handsfree, but do not remove the headset.

2. The quality of radio broadcasting is influenced by the



environment. You can improve the quality by manual search and by placing your device closer to the window.

Press Options (left soft key) to enter channel list, manually enter frequency (manual input) or perform automatic channel search.

### **6.4.8 File Manager**

In Menu mode, go to Multimedia > File Manager. You can view all or the free storage of the memory card (if it is connected to a memory card). To view the files, select the device or memory card with the navigation keys, then go to the Options (left soft key) menu and select Open.

**New Folder:** Create a new directory on the current drive.

**Rename:** You can change the name of the file or directory depending on which one is selected.

**Delete:** Deletes the selected library or file, depending on which one you chose.

## **6.5. Magnifier**

By using the camera zoom function, this menu helps you to read small texts.

## **6.6. Organizer**

### **6.6.1 Alarm**

In Menu mode, go to the Organizer> Alarm menu, where you can set 5 different alarms. The wake-up function also works when the device is switched off.

When the alarm clock sounds, press the Left soft key or the End call key to stop; press the Right soft key to the snooze.

To change the alarm details, select one from the list and press the left soft key [Edit]:

1. Activate / deactivate the alarm by selecting the status (press Right and Left navigation keys). In the alarm clock list, the active alarms are indicated by a check mark.
2. To change the alarm time (Time), scroll with the navigation keys (up and down) and use the numeric keypad to enter the alarm / alarm time.
3. To set Repeat, press Options (left soft key)> Select and then select Once, Everyday, or Custom (Pre-set Day) to be active. With Options> Save, save the setting.
4. Select the alarm tone to change the alarm sound. Press the left soft key [Options> Select] to display the list of ringtones, press the down / up navigation buttons to scroll through the list and listen to the alarm tone by pressing the left soft key [OK] to activate the selected sound.

To save the alarm parameters, press Save (left soft key).

## **6.6.2 Calculator**

In Menu mode, go to Organizer> Calculator to open the calculator. The calculator in the machine can perform the 4 basic operations.

## **6.6.3 Bluetooth**

In Menu mode, go to Organizer> Bluetooth to open bluetooth. You can make the following settings in the menu item:

- Power/Bluetooth: Turns the function on and off using the left soft key.
- Visibility: When the feature is active, your device is visible

to other bluetooth devices.

- My device: Find new devices and show paired devices.

Search audio device: Search for Bluetooth audio devices.

- My Name: You can change the device name for other bluetooth devices.
- Advanced: You can set the audio path and check the device MAC address.

## **6.6.4 Calendar**

To open Calendar- in menu mode- go to Organizer> Calendar. The calendar indicates the current month, highlighting the current date with color. Press the left soft key [Options] to choose from: Jump to date, Go to Today, Start of week.

## **6.6.5 Flashlight**

To turn the flashlight on and off using the "Flashlight" button on the side of the unit, slide the button upwards to turn it on and down to turn it off.

## **6.7. Settings**

### **6.7.1 Profiles**

Turn silent mode on or off:

To activate the Silent mode, press and hold #. If you press and hold # again, you can activate the General Mode (or the mode that was set when you activated Silent Mode).

In Menu mode, go to Settings > Profiles, then select Silent mode. You can return to the General Profile in the same menu item.

Customize profiles:

In Menu mode, go to the Settings > Profiles menu, and then select the profile you want to change. There are 4 profiles in the device: General, Silent, Meeting, Outdoor.

To change the profile, press [Options] and select Customize. In this menu, you can change the following settings: Alert type, Ring type, Ringtone, Ringtone volume, Message, Message volume, Keypad sound, Keytone volume.

In the Reset menu, you can reset the factory defaults for the profile.

Add a ringtone from a memory card:

In Menu mode, go to Settings > Profiles > Options > Customize > Ringtone, and then select Select from File.

Then, the device enters the File Manager where you can select from the music stored on the memory card (if there is a memory card in the device) by pressing the OK soft key.

## 6.7.2 Phone settings

- You can change the following in the Date and Time submenu:
  - Set date and time: Use the navigation keys to highlight the line you want to set, and then use the numeric keypad to enter the time and date. To save, press Save (left soft key).
  - Enter Format: You can set the time and date format.
- Schedule power on/off: You can set the time when the device automatically turning on/off.
- Language: You can select the language you want to use

- Writing language: You can edit your keyboard input method according to your custom.
- Display: You can customize the display:
  - Wallpaper: Choose a wallpaper for your phone from pre-installed wallpapers (System) or from your own files (Custom); this picture is displayed in standby mode.
  - Show date and time: to set whether the date and time should be displayed on the display in standby mode.
  - LCD Backlight: You can set the display backlight time and brightness.
- Shortcuts: Allows you to assign different applications to your device's pushbuttons.
- Dedicated key: You can assign functions to the middle navigation button of the machine. The Up, Down, Right, Left buttons have different applications / menus available.
- Flying mode: In this menu item, you can turn the flying mode on and off. The flying mode turns off all network functions.

### **6.7.3 SOS function settings**

To set the SOS function, go to Menu> Settings> SOS Settings.

- Status: activates the function (SOS button on the back of the device).
- SOS numbers: dial the numbers listed here by pressing the SOS button or sending an SMS message (if active) to the numbers in the list. The alarm chain lasts until one of the numbers in the list answers the call. Attention! Do not enter a number where call reception is automatic.
- SOS SMS on / off: Enable or disable SOS SMS function.
- SOS SMS: In this menu item, you can edit the text of an emergency message. At the end of editing, save the message text using Save (left soft key).

- **Warning Tone Status:** Enable or Disable the sound during an alarm.

To start the SOS alarm, press and hold the SOS button on the back of the device. To cancel the alarm, press again.

#### **6.7.4 Network Settings**

Under Settings> Network Settings, you can select automatic (network access automatically) and manual network selection (from the displayed list to the network).

#### **6.7.5 Security Settings**

You can change security settings in this menu so you can not use your device or your SIM card in the appropriate settings.

##### **• SIM Security**

To change the SIM card and phone security settings in menu mode, go to Settings> Security Settings. To set the SIM card's settings, select SIM security, then press OK (left soft key). Within the SIM Security menu, you have the following options:

- **PIN lock:** Press the left soft key (On / Off) to activate or deactivate, the current status is indicated as [PIN lock] in the line. Enter the PIN code to activate the SIM PIN. If the PIN request is activated, you must enter a PIN whenever the PIN is requested. For more information, contact your service provider. Note: If the PIN is entered incorrectly three times, the SIM card will be locked, which can be cleared by entering the PUK code. The PUK code is required to unblock the PIN. The PIN and PUK codes can be found in the SIM card package; otherwise contact your service provider.
- **Change PIN and Change PIN2:** In this menu, you can change the PIN / PIN2 codes, enter the new codes twice twice after entering the old code for which a message appears on the

display. The code must consist of 4 to 8 digits. You can only change the PIN code if the PIN request is active.

#### • **Phone security**

Press OK to turn the phone lock on or off, the current status is indicated by the [Phone Lock] line.

To activate the phone lock, you must enter the phone password. If this feature is active, the phone password must be entered every time you turn it on.

Note: The default phone password is 1122. Please change this to a unique code as soon as possible. The specified code may consist of 4 to 8 digits.

#### • **Screen auto lock**

In this menu, you can deactivate the keypad lock and set how fast it will be on when it is switched on (Off, 15 sec, 30 sec, 1 minute, 5 minutes).

### **6.7.6 Restoring settings**

To reset the settings- in the menu mode- go to Settings> Restore Settings to reset your device settings to factory defaults. Enter the phone password to reset. Selecting [Yes] will reset the device and restart the device. **Attention! This setting can not be undone and deletes all data on the device (such as names, messages, personal settings).**

## 7. Declaration of Conformity

The Blaupunkt BS 04 is compliant with the essential requirements and relevant provisions of RoHS Directive 2014/53 / EU and 2011/65 / EU. The Declaration of Conformity is available on our website.



Designed and Engineered by

Blaupunkt Competence Center Mobile Europe

HTM Mobile Kft.

1118 Budapest, Dayka Gábor utca 3. Hungary

Assembled in P.R.C by

CSM Technology Co., Ltd.

5F, Bld. C, Hongshengyuan Industrial Park, Longgang District,  
Shenzhen, China

For more information on this product, visit our website at  
[www.htmmobile.hu](http://www.htmmobile.hu) or [www.blaupunkt.com](http://www.blaupunkt.com).