

**BLAUPUNKT**

User's Guide

Mobile phone FM 03



*Enjoy it.*

## Contents

1. General Information .....	1
2. Safety .....	1
3. Product specifications .....	7
4. About the keys .....	8
5. Getting Started.....	9
5.1. Insert a SIM card.....	9
5.2. Insert a memory card .....	9
5.3. Insert battery .....	10
5.4. Remove the battery.....	10
5.5. Charging the battery .....	10
5.6. Maintaining the battery .....	11
6. Power On/Off .....	12
7. Call functions .....	12
7.1. Make a call .....	13
7.2. Auto redial .....	13
7.3. Receive call .....	13
7.4. Conference .....	15
7.5. Available functions during call .....	15
7.6. Emergency call.....	16
7.7. Handsfree function.....	16
7.8. View and answer a missed call .....	16
7.9. Dial a previously dialed number .....	16

8. Main menu .....	16
9. Messages.....	17
9.1. Write a message .....	17
9.2. Incoming messages .....	18
10. Call logs .....	18
11. Phonebook .....	19
11.1. Add new contact .....	19
11.2. Search and view a contact .....	19
12. Camera .....	20
12.1. Take photos.....	20
12.2. Video recorder.....	21
12.3. Video player .....	22
13. Audio player .....	22
14. FM radio .....	23
15. Sound recorder .....	24
16. Settings.....	24
16.1. Call settings.....	24
16.2. Phone settings .....	25
16.3. Security settings .....	26
16.4. Network settings .....	27
16.5. Restore factory settings .....	27
17. Profiles.....	28

18. Extras.....	29
18.1. Bluetooth.....	29
18.2. File manager.....	30
18.3. Calculator.....	30
18.4. Alarm.....	30
18.5. Torch.....	30
18.6. Games.....	30
19. USB connection.....	31
20. Appendix.....	32
20.1. Errors, Error Messages.....	32
20.2. Handling and maintenance.....	33
20.3. Declaration of Conformity.....	34

# 1. General Information

Thank you for choosing our device. This manual contains general information, in addition to the information required for operation.

Note:

- For your safety, use only accessories approved by the manufacturer. Use of unapproved accessories may result in a warranty revocation.
- If the device that appears in this manual does not match your device, rely on the information displayed on the device. The manufacturer reserves the right to change the operation of the device without prior notice.

The manufacturer reserves the right to change the operating instructions as well.

# 2. Safety

## Safety regulations

Please read the safety instructions carefully, as ignoring it may be dangerous or illegal.

The owner of the device is responsible for the use of this appliance. Do not switch on the device, where it is prohibited to use a mobile phone or to interfere with radio waves.

## Airplane

When traveling via airplane, your device must be switched off whenever the crew or warning signals are instructed to do so. Using a mobile phone may be dangerous to the operation of

the aircraft and may interfere with network communication. Use of the device despite the ban may have legal consequences.

### Explosion hazards and restricted areas

Turn off the device in explosion hazardous areas. Sparks in such places may lead to an explosion or fire that may result in serious injury or death. Turn off the device at gasoline or gas filling stations, especially near the fuel pumps. Follow the instructions strictly in locations such as fuel tanks, chemical plants, and explosive substances.

### Electronic devices

To avoid demagnetisation, do not leave your device for a long time close to electronic devices.

### Electrical medical devices

Your phone is a radio transmitter that can interfere with electronic medical devices or implants such as hearing aids, pacemakers, insulin pumps, and so on. operation. We recommend that you keep a distance of at least 15 cm between the implant and the device, never wear your phone in the breast pocket. Follow the instructions of the manufacturer of the medical device. If you have a medical implant and have any other questions about using mobile or wireless devices, ask your doctor.

### Use in hospitals

Hospitals and other healthcare facilities can use devices that are particularly sensitive to RF signals. Switch off your phone if prohibited signals are instructed to do so, or hospital staff ask for it.

### Road safety

Observe the local laws and regulations regarding smartphone usage while driving. If you make a phone call while driving, observe the following rules: Focus on driving to become aware of traffic conditions; If the device has a hands-free function, use handsfree. If the traffic situation requires, stop the car before you pick up the phone.

### Use environment

The device complies with the recommended emission values for radio waves when kept at a minimum distance of 1.5 cm from the ear. When carrying the phone in a case, belt clip or holder, make sure that it does not contain metal and that the phone is slightly distracted from the body. When using other accessories, it is not possible to operate in accordance with radio frequency guidelines. If you do not use a case and do not hold the phone on your ear, keep it at least 2.5 cm away from your body, especially during data transfer.

### Note on using this unit

- Do not place the device close to magnetic cards or other magnetic devices. The phone's magnetism can erase the data found on the disc on the card.
- Wired telephone, television, radio may cause interference and may affect the operation of the mobile phone.
- Keep the appliance dry, all moisture may damage the electrical circuits.
- Keep the unit away from extreme temperature conditions.

- Keep the appliance away from places where the temperature can reach 60 ° C, such as dashboard, window sill, fire, burning cigarette.
- Do not paint the appliance.
- Do not shake the appliance, do not drop it or crush it.
- Do not disassemble or modify the phone as this may damage the phone, which may cause leakage, which interrupts the internal circuits.
- Clean only the phone with a damp or non-static cloth. Do not use alcohol, thinner, benzine or other chemical, scouring agent to clean the appliance.
- The product may become warm during normal use or during charging. Ne hagyja a készüléket hosszú időre lemerült akkumulátorral, mert adatvesztést okozhat.
- Metal parts of the device may cause skin irritation.
- Do not put the device in the back pocket if it is damaged, damaging the phone. Do not put the device in the bottom of the bag as it may break.
- If the phone is in vibrating mode, place it in a place where it can not fall off during vibration.
- Do not press the display with a needle or other sharp object, as it may damage the LCD display, which will give you a surplus.
- Store the device in an appropriate location when not in use. Keep away from children.
- If you lose or steal your device, contact your network service provider immediately to prevent the SIM card

from being used by unauthorized persons. The service provider may ask for the IMEI number of the device that you can find on the battery sticker or by dialing the code \*#06#. Record this number if you need it in the future.

- To prevent unauthorized use, lock the SIM card or the device, change the passwords if necessary.
- Always switch off the appliance before removing the battery. Otherwise, it may cause data loss.
- When leaving your vehicle, carry the appliance or put it in the glove compartment to prevent theft.
- Keep the device, battery, and charger away from children.

#### Notes on using the battery

- Do not disassemble or modify the battery as this may cause leakage, overheating, or explosion.
- Do not dispose of the battery in a fire as it may cause an explosion. Dispose of the old battery according to local regulations. Do not throw it into household rubbish.
- Do not short circuit the battery circuits with a needle or other metal object as it may cause leakage, overheating or explosion.
- If the battery is exposed to a liquid, it may cause blindness. If this happens, do not rub your eyes, but rinse with water and seek medical attention immediately.
- If the liquid spilled from the battery contacts skin, burns the skin. Wash your skin with clean water and consult a physician immediately.

- Do not take the battery in your mouth as it may be poisonous.
- Do not continue to use the battery if it feels too hot or has changed its color or shape.
- Keep the battery dry.
- Do not store the battery near fire or other hot places. Store the battery in a cool, well-ventilated area and do not expose it to direct sunlight.
- Do not charge the battery for more than 24 hours.
- The battery can be charged for hundreds of times, but each charge will shorten its life and wear out after a while.
- When replacing a battery, use only a battery approved by the manufacturer. Using an incorrect battery may result in a warranty.

### Qualified service

The product can only be repaired by a qualified person.

### Hearing protection

To avoid hearing loss, do not listen to music or radio for a long time at high volume.

### Water resistance

The appliance is not waterproof, so keep it dry.

## 3. Product specifications

### Power Supply Features:

- Input: (AC), 100-240 V- 50/60 Hz – 0.1 A
- Output: (DC), 5 V- 500 mA

### Battery Type and Voltage:

- Li-ion battery, 3.7 V, 800 mAh

### Network type:

- GSM 900/1800 MHz

### SAR values:

- 0.635 W/Kg (Head)
- 0.794 W/Kg (Body)

Note: Actual operating conditions depend on local conditions, network environment, and user habits.

The mains power socket used must be close to the charger/holder and easily accessible, so that it can be used as an 'on/off' facility.

## 4. About the keys

- 1. Left soft key / Right Soft key:** Opens the menu item in the left / right corner of the screen.
- 2. Dial key:** dial / answer the call and in standby mode, open the call list.
- 3. End / Off Power Button:** Press and hold to turn the power on and off; briefly press it down, reject a call, or quit it from the menu.
- 4. Ok key:** press to execute the indicated function. In standby mode, press to open the selected link.
- 5. Navigation keys:** Press up / down / left / right directions to scroll through the menu. In standby mode, press the up / down / left / right arrows to access the quick menu at the top of the screen and press OK to execute.
- 6. 0-9 alphanumeric keypad:** Press the corresponding keys to enter numbers when dialing or the characters of the numbers when writing text.

In Idle mode: Press and hold "2" to "9" to use the Speed Dial feature (if set in the menu [Phone Book / Speed Dial]).

Press \* twice to display "+" the international developer signal.

- 7. \* (Star) button:** in standby mode press and hold \* to display the international prefix '+'. In Menu mode, briefly press to lock the keypad.
- 8. # (Dual Cross) button:** in standby mode, press and hold to activate / deactivate Silent mode.

## 5. Getting Started

### 5.1. Insert a SIM card

To use your phone, you need to insert a valid SIM card to connect to the GSM network.

To avoid missing or damaged the contents of the SIM card, please DO NOT hold the metal part of the SIM card with your hands free and keep it away from electromagnetic devices. If the SIM card is damaged, it can not be connected to the GSM network. Before inserting or removing the SIM card, make sure that the device is turned off and removed from the back of the device.

Note: Locate the SIM card slot on the back of the device and in the direction of the signal, with the collisions slide the card.

### 5.2. Insert a memory card

The memory card is not part of the basic package, but the memory of the device can be expanded with an SD card. Please make sure that the memory card is inserted correctly before use.

Note that the device may shake, the memory card may slide out of the slot, so please do not bend it, scratch the memory card or expose it to static electricity or dust, do not immerse it in water. Place the memory card in the slot on the back of the machine, with a chip down, as shown on the device.

Please be careful when using a memory card, especially when it is removed. Some memory cards must be formatted with a computer before use.

### **5.3. Insert battery**

1. Insert the battery chip into the protruding metal point in the battery slot, insert the battery, and push the top down until the battery engages in the recess.
2. Put back the back cover.

### **5.4. Remove the battery**

To remove the battery, turn off the device, remove the cover, and then remove the battery at the top.

Note:

Please remove the battery when it is switched off, as it may cause abnormal operation when the skin is switched on.

### **5.5. Charging the battery**

Connect the charger to the appliance and plug the other end into the socket. If the device is turned on while charging, the battery icon will move in the right corner of the display. Charging is completed when the charging indicator on the top right is lit. If charging is switched off, a charging indicator appears on the display. When charging is complete, unplug the charger from the unit.

Note: When the battery voltage is low, a warning message is displayed on the display. Charge the battery as soon as you can, to avoid any inconvenience, the device can be switched off during a telephone conversation. Your device can automatically turn off when the power level is too low.

1. If you use the battery at a persistently low charge, it may adversely affect the battery life and quality.
2. Use only the charger approved by the manufacturer for proper operation.
3. Do not remove the battery during charging.
4. Fill the unit for at least 4 hours before first use. This can increase the efficiency of the multiple charge and discharge cycles.

## **5.6. Maintaining the battery**

The device has a rechargeable battery. When not using the charger, disconnect it from the power source. For more than a week, do not leave the phone charging. Temperature influences battery capacity. Battery may need to be cooled or warmed up before charging. If the battery temperature is lower than 0 ° C or higher than 45 ° C, do not charge the battery. Use the battery according to its intended purpose. Do not short-circuit the battery terminals. Do not use a damaged battery. If you are using an appliance under extreme temperature conditions, the battery will not work properly and its life span will be reduced. DO NOT throw the battery into fire, follow local laws and regulations regarding the disposal of the spent battery.

## 6. Power On/Off

Press and hold the End / On-Off button to turn the unit on or off.

1. If a SIM card is not inserted, it is defective or not fit correctly, a warning message will be displayed after switching on the display. Turn off your readiness and make sure the SIM card is inserted correctly.

2. If you insert the SIM card into the device, the PIN request and the phone password are active, the device prompts you for the password and PIN code and switches to standby mode. After switching on, the phone automatically searches for the network. If the device has found the allowed network, it will display its name and signal strength.

If your device does not find a suitable network, you can only make an emergency call or access non-network services on your phone

## 7. Call functions

If you have completed the steps in the previous chapter, the machine is ready to make and receive calls. For more information about call origination and basic call functions, see this chapter.

Note:

If you are using a headset, gently insert and unplug the jack plug to avoid possible injury.

## 7.1. Make a call

When the network service provider name appears on the display, the phone is ready to make and receive calls.

### Direct calling

In Standby mode, press the number keys to enter the number you want to call, press the right soft key to clear the wrong numbers, press the left soft key or the dial key to start the call if the specified number is correct.

To enter an international phone number format, press and hold the [\*] key until "+" international call sign appears on the display.

### Dialing from Names

Use the right soft key to enter Names. Use the navigation keys to scroll to the contact you want to dial, then press the call key or Options (soft key left)> Call.

## 7.2. Auto redial

If you have set up automatic redial before (Menu> Settings> Call settings> Advanced settings), the last called, but unanswered call is redialed.

## 7.3. Receive call

When an incoming call is alerted to your device if your service provider supports the number display, the display shows the caller's number or the caller's name (depending on whether you have saved it in the phone book).

1. Press the dial key or the left soft key and answer [Answer] to the incoming call.
2. If **Any key** responds function is active, [Settings / Call Settings / Advanced Settings / Answer Mode / Anykey], you can answer any call using any key except the Right softkey and the End / Off button.
3. When the headset is connected to the unit and [Headset] is activated [Settings / Call settings / Advanced settings / Answering mode / Automatic receiving in headset mode], incoming calls will be automatically received by your phone after 5 seconds of vibration or ringing.
4. If you do not want to answer the call, press the End / Off button to reject the call.

The End / Off button can also be used to disconnect the call.

5. During a call, press the down / up navigation keys to reduce or increase the loudspeaker volume.

### Receive a second call

If the call waiting is active (you may need to be ordered from the network service provider), if an incoming call is in progress during an ongoing call, the device will briefly alert you. You can either answer or reject the second call. If you receive the second call, the ongoing call is held.

You can turn off the call waiting function in the device: Menu> > Call settings> SIM1 / SIM2 call settings> Call Waiting (Activate / Deactivate).

## 7.4. Conference

If supported by the network, multiple party calls can be made. In Standby mode, enter the phone number, in international format.

To dial, press the call key.

To add a new call, enter the second phone number and dial the desired number. You can also make a new call from the contacts stored in the phone book; during this active call, press Options, select Phonebook, locate the contact you want to dial, and press the call key. When the call is recovered, select Options> Conference. You can repeat the above steps to add more calls.

## 7.5. Available functions during call

Press <Menu> (left) to select from the following options during a call:

- Hold / No hold
- End call
- Phonebook- Open a phonebook during a call
- Call list- to open call logs during a call
- Messages- Open messages during a call
- Start recording- Record the ongoing call
- Mute
- Volume- to decrease or increase the volume in the call

You can navigate through the available menu items on the screen with the navigation key.

To end the call, press the end call key, or select Options> End call.

## 7.6. Emergency call

You can immediately make an emergency call without a SIM card. Different networks can use different emergency numbers, so please contact your network operator.

## 7.7. Handsfree function

During a call, you can activate the loudspeaker using the <Handsfree> (Right) softkey. To return to the student, press <Handhold> (right) button.

## 7.8. View and answer a missed call

This menu shows missed calls. To dial the missed call, press (Left) <View>, then press the call launcher or Options> Call to dial the number.

## 7.9. Dial a previously dialed number

Press the call key in the standby mode to display the most recently dialed numbers. Select the phone number you want to dial and then press the call key again or Options> Call.

# 8. Main menu

In Standby mode, press the left soft key to enter the Main Menu. Within the Main Menu, you can access many functions and actions: Messaging, Call logs, Phonebook, Camera, Multimedia, Games, Audio player, Extras, File manager, Settings, FM radio, Profiles.

## 9. Messages

Message service is a network-dependent service that allows you to send and receive SMS. For more information, contact your network provider.

### 9.1. Write a message

Features: Write new message, Inbox, Drafts, Outbox, Sent items, SMS settings.

In Menu mode, select Messages> Write message.

Note: To send the SMS, you must have the correct message center number from your network service provider. You can check and change the message center in Menu> Messaging> SMS settings> SIM1 / SIM2> Profile settings.

While writing a message, press # to switch between input modes. Text messages can consist of up to 612 characters (up to 268 characters for accented characters).

Press the left soft key [Options] during message editing to access the following functions:

- **Send to:** You can specify the recipient of the message manually or select it from Names.
- **Input Mode:** Displays the Available Input Modes list.
- **Advanced:** Insert phone number, Insert name, Insert smiley
- **Save:** Save a message to drafts
- **Cancel:** Discard Message

## Sending

After Adding a Recipient (which you can do by entering a direct phone number or from Contacts), you can send the message by selecting <Options> Send.

## **9.2. Incoming messages**

You can store received messages on your device or on the SIM card and access it.

When you receive a message, a beep or vibration (as previously configured in the menu) will alert you to this, or a graphic will appear on the display. Press the left soft key [View] or OK to view the message, and the right soft key to return to the SMS menu to read other incoming messages.

## **10. Call logs**

In Menu mode, select Call Logs to access the Missed, Dialed, Received, All Calls list.

Delete call logs: Use this option to clear the call details of a given menu item or all the lists at a time.

Missed calls, Dialed numbers, Received calls list, the following options are available:

- View- view the details of a call.
- Call- to call a specific number
- Send a text message - Send a text message to the selected phone number.
- Save to phonebook- Add phone number to Contacts.
- Add to blacklist- block phone calls.
- Delete- Deletes a specific item from the list

In Call timers, you can view the duration of the call by type and in total.

## 11. Phonebook

In Standby mode, use the right soft key to enter Names or to access Menu> Phonebook.

Press the left soft key [Options] to access the menu function.

### 11.1. Add new contact

In Standby mode, enter the phone number and select (left) Options> Save to Phonebook.

Select storage space (SIM1, SIM2, or Phone) to save the phone number.

Enter contact details: name, phone number.

To save, press the Options (left) soft key and select Save.

### 11.2. Search and view a contact

- In standby mode, select the <Names> (right) soft key and select the desired contact using the navigation keys.
- In Menu mode, enter the Phonebook menu and enter the first letter of the contact you are looking for in the search box. Select a name from the hit list.

If you find a contact you are looking for, you can choose from the following options (only available after opening a contact):

- View: View contact information
- Send text message - Send a text message to the selected phone number
- Call- to dial the selected number.
- Edit- to edit the selected contact.
- Delete- to delete the selected contact.
- Copy- to copy the contact to the SIM card or phone memory.
- Add to blacklist: Block inquiries from phone numbers
- Mark several: Select multiple contacts at the same time.
- Phonebook settings: Preferred storage, Speed dial, Extra numbers, Memory status, Copy contacts, Move contacts, Delete all contacts

## 12. Camera

### 12.1. Take photos

In Menu mode, select Camera to open the camera.

- Point the lens towards the object and adjust the image.
- Take the photo with the middle navigation key.

The image is saved in JPG format.

**Attention! To save the images, you need a memory card.**

To view the saved image in the camera application, select Options> Photos or in Menu> Multimedia> Gallery.

To delete the image, press Options> Delete.

To send the image, press Options> Send, where you can share the image via Bluetooth.

To adjust the image size, select Camera> Options> Image settings> Image size. The maximum image size you can select is 640 \* 480 pixels.

Note: When shooting in low light conditions, image quality may be poor.

### Camera options:

**Switch to video recorder:** Switch to Video Recording Mode.

**Photos:** View saved images here.

**Camera settings:** you can fine-tune the camera in this menu item

**Image Settings:** Image Quality Settings

**Effect settings:** select different effects (eg sepia, negative).

**Storage:** You can set the location for saving your photos

**Restore default settings:** Reset camera functions

## 12.2. Video recorder

### Attention! To use this function, insert the memory card.

In Menu mode, select Multimedia> Video Recorder to make a recording.

Press the center navigation key to start recording.

To pause recording, press the <Pause> middle button. To stop recording, press <Stop>.

Your video will automatically be saved

### 12.3. Video player

In Menu mode, select Multimedia> Video Player, select the video you want to watch, then press the center navigation key to start playback.

During video playback, you can use the following buttons:

Mid Navigator Button: Starts and pauses playback.

Navigation key up and down: Volume control.

Navigation key right and left: step.

Press Options to switch to full-screen playback and set auto-repeat.

## 13. Audio player

**Attention! To use this function, insert the memory card.**

The music files saved on the memory card are loaded automatically.

To play the list: In Menu mode, go to Audio player. To play the list, press the center navigation key.

In List> Options> Preferences, you can set tracks to play in random order and repeat.

During music playback, you can move forward and backward between tracks by moving the navigation key right and left.

You can control the volume of playback by up and down the navigation key: Increasing volume, Lowering volume

## 14. FM radio

To listen to an FM radio, connect the headset to your device, which acts as an antenna. A 3.5 mm jack plug headset can be connected to this unit.

In menu mode, select FM radio.

### Automatic Search

By selecting Options> Auto Search, the device searches for and saves available channels. You can view saved channels in the Channel List menu. Select the channel you want to play from the list, then press the center navigation key, or select Options> Play.

### Manual Search

Go to Options> Manual input, then enter the channel frequency number, confirm with OK, then press Options> Done.

### Play in background

To play in the background, select FM Radio> Options> Settings> Background play

### Turn on the loudspeaker

To turn on the loudspeaker, select FM Radio> Options> Settings> Loudspeaker. The speaker can be switched off in the same menu item.

- During radio, you can use the following menu items:
- Navigation key up and down: Increase or decrease the volume
- Navigation key left and right: move between channels.
- Center navigation key: Stop playback.

## 15. Sound recorder

### **Attention! To use this function, insert the memory card.**

To make a voice recording, in Menu mode, select Multimedia> Sound recorder.

To start recording, go to Options> New Entry or start the recording with the center navigation key. To pause the recording, press <Pause>. To stop recording, press <Stop>. The recording will automatically be saved, and you can listen to it again by pressing the <Playback> button.

To play a recording, go to Options> Playback and select the video you want to play.

## 16. Settings

### 16.1. Call settings

#### Call divert

To divert a call From Menu mode, go to Settings> Call settings> SIM1 / SIM2 Call settings> Call divert.

Select the divert type (All voice calls if not available, if there is no answer if busy), then press OK and Activate. Enter the divert number and press <OK>.

To cancel redirects, in Menu mode, go to Settings> Call settings> SIM1 / SIM2 Call settings> Call divert and select Cancel all diverts.

### Call waiting

If supported by the network, you can receive a second call (Call Waiting) during a conversation. You can turn off the call waiting feature in the device: Menu> Settings> Call settings> SIM1 / SIM2 Call settings> Call Waiting (Activate / Deactivate / Query Status).

### Advanced settings

In Menu mode, go to Settings> Call settings> SIM1 / SIM2 Call settings> Advanced settings, where you can make the following settings: Blacklist, Auto redial, Call time reminder, Auto call recording, Answer mode.

The Blacklist menu option allows you to disable incoming calls and messages from the numbers you entered. In the Blacklist menu, enter numbers you do not want to receive a call. After editing the number, select Save. The Blacklist mode option allows you to turn the feature on or off.

## **16.2. Phone settings**

### Time and date

To set time and date, go to Menu> Settings> Phone settings> Time and date. After setting the correct time and date, press <OK> to save.

To select the correct time (12/24 hour) format or date format, go to Menu> Settings> Phone Settings> Time and date> Enter Format. To save the changes, press OK.

### Schedule power on/off

In this menu, you can set the device to automatically switch on or off at the specified time.

### Set language

In Menu mode, go to Settings> Phone settings> Language. The display language and the input language can be set separately: the device contains English, Polish, Czech, Slovak, Hungarian and Romanian.

### Flight mode

To activate flying mode in Menu mode, go to Settings> Phone settings, select Flight mode. Flying mode can be switched off in the same menu item.

## **16.3. Security settings**

### SIM1 / SIM2 security (PIN)

**PIN code:** Protects your SIM card against unauthorized use. In Menu> Settings> Security Settings> SIM1 / SIM2 security, you can turn the PIN lock on or off and change the PIN code.

\* Note: If you enter an invalid PIN three times in succession, the SIM card will be locked, and you will need to have the SIM card PUK code unlocked. The PIN and PUK codes are supplied with your SIM card, provided by the network service provider.

**PIN2 code:** You can use the PIN2 code to access advanced features (if supported by your service provider).

\* Note: If you enter an invalid PIN2 code three times in a row, the PIN2 code will be locked and you will need the PUK2 code to unlock the PIN2 code. If not, contact your network operator.

To change the PIN: From the Menu> Settings> Security Settings> SIM1- / SIM2 Security> Change PIN menu, you can change the PIN code: Enter the old PIN code and then double-press the new PIN with <OK>.

### Phone lock

Menu> Settings> Security settings> Phone security> Phone lock allows you to password protect your device against unauthorized users.

To activate the phone lock, you must enter the phone password. If this feature is active, the phone password must be entered every time you turn it on. Note: The default phone password is 1234. Please change this to a unique code as soon as possible: to change the code in Menu> Settings> Security Settings> Phone Security> Change password. The specified code may consist of 4 to 8 digits.

## **16.4. Network settings**

### Network selection

For manual network selection In Menu mode, go to Settings> Network settings> SIM1 / SIM2> Network selection and select Manual. The device will search for a list of available networks. Select the appropriate network and press <OK>.

## **16.5. Restore factory settings**

To reset the factory settings (delete all user data from the device) In Menu mode, go to Settings> Restore factory settings. Factory password required for restoration: 1234. Attention! All user data is deleted from the device, deletion can not be undone.

## 17. Profiles

### Silent mode

To activate the Silent mode, press and hold #. Press the # button repeatedly to activate General Mode.

### Customize profiles

In Menu mode, go to the Profiles menu, and then select the profile you want to change. There are 5 profiles in the device: General, Silent, Meeting, Outdoor, Headset

To change the profile, press <Options> and select Customize. opportunity.

**Alarm Type:** Ring Only, Vibrate, Vibrate and Ring, Vibrate then Ring.

**Ringing type:** Single beep or Repeat

**SIM1 / SIM2 Incoming Call:** Choose a ringtone for incoming calls.

**SIM1 / SIM2 message:** You can select an alert tone for incoming SMS messages.

**Message volume:** allows you to set the ringing tone for incoming calls, messages and alarms.

**Keypad:** You can set the beep when you press the keypad (Silent, Click, Tone)

**Keystone Volume:** The strength of a beep when keypad is pressed

**System Alert:** Enable / disable system messages alerts

### Add a ringtone from a memory card

In Menu mode, go to Profiles> Options> Settings> SIM1 / SIM2 Incoming call, then select (from the bottom of the list) the Selection file.

Then the device enters the File manager, where you can select the music stored on the memory card (if there is a memory card in the device) by pressing the Select button.

## 18. Extras

### 18.1. Bluetooth

To turn Bluetooth on, go to Menu> Extras> Bluetooth, then activate Bluetooth. You can set your device visibility for other Bluetooth devices by using Bluetooth> Visibility.

Pairing devices: In the Bluetooth menu, select My device, and then click Search new device. The device will make a list of visible devices. Select the device to be paired from the list and press <Pair>. Next, confirm the approval code displayed on both devices.

Sending files via Bluetooth: Select the file (image, music, etc.) from your phone applications that you want to send. Go to Options> Send> Via Bluetooth, then select the recipient and press <Select> to send.

Receive data via Bluetooth: The device asks you to receive and saves the file after confirmation.

## **18.2. File manager**

To view the files stored in your device, in Menu mode, select File manager.

## **18.3. Calculator**

In Menu mode, select Extras> Calculator. To perform basic mathematical operations, use the buttons corresponding to the calculator display.

## **18.4. Alarm**

To set an alarm in a menu mode, go to Extras> Alarm. Use the left soft key to turn it on, then press the navigation key to set additional settings: set the alarm time and repeat, ringtone. To save, press OK.

## **18.5. Torch**

In Menu mode, go to Extras> Torch to turn the flashlight on or off. In Standby mode, press and hold 0 to turn the flashlight on and off.

## **18.6. Games**

To access games, go to Games in Menu mode.

The game called Snake is available on your device.

For a description of the game thread, see the game's Help Center.

## 19. USB connection

You can connect your device to a computer via a USB cable. After connection, you can select from the following options: Mass storage (charging the battery of your device, accessing data stored on your device and memory card via a PC), COM port (this feature is only for service and manufacturer use).

### Mass storage (Usage as a USB Disk):

Connect the device to your computer using the USB cable. From the USB Config menu, select Mass storage. After you successfully install the device driver software, the device appears as a removable disk on your computer, then you can copy data from the device (memory card) to your computer and vice versa. To uninstall, select "Safely Remove Hardware" on your computer.

Note:

- During the use of the above function, many features (eg camera) on the unit will not work.
- If you connect the device to your computer but do not select additional options, it automatically starts charging.

## 20. Appendix

### 20.1. Errors, Error Messages

#### **The device does not turn on**

If the battery voltage is very low, the device may not turn on. Charge the battery and then try to turn it on again.

#### **The call is not ringing on this phone**

Check Call settings> SIM1 / SIM2 call settings> Call divert to see if no call forwarding is activated.

#### **No SIM**

Be sure to insert the SIM card correctly. If the SIM card is properly inserted and it still does not detect the device, please contact your service provider.

#### **No service**

If you are in an area where there is no network coverage, "No service" appears in the display and you can not make and receive calls.

#### **Only Emergency Calls**

If you are within the coverage of your own network but within the coverage of another network, you can only make an emergency call.

#### **Invalid SIM**

The SIM card is locked or defective. Contact your network service provider.

## 20.2. Handling and maintenance

- Keep the appliance and its accessories away from children
- Keep the appliance dry, any moisture may cause a short circuit.
- Do not hold the unit in a dusty area because the parts may be damaged.
- Keep the device away from hot spots. High temperatures can shorten the life of electrical devices, melt plastic parts, and damage the battery.
- Do not attempt to disassemble the machine, only service it at a specialist service.
- Do not drop, crush and shake the phone as internal circuits may be damaged.
- Do not use chemicals or cleaning agents to clean your phone.
- Do not flip the phone. Paint can inhibit the removal of removable parts and may affect the operation.
- Use only the manufacturer-approved antennas. Unauthorized antennas or accessories may damage the phone. Do not hold an external antenna close to the unit as it may cause a deterioration of the sound quality.

The above instructions apply equally to your device and accessories. If you notice a malfunction in any accessory or appliance, contact your service representative.

### 20.3. Declaration of Conformity

The Blaupunkt FM 03 is compliant with the essential requirements and relevant provisions of RoHS Directive 2014/53 / EU and 2011/65 / EU. The Declaration of Conformity is available on our website.



Import: HTM Mobile Ltd.

Address: 1118 Budapest, Dayka Gábor street 3.

Manufacturer: CSM Technology Co., Ltd.

Address: 5F, Bld. C, Hongshengyuan Industrial Park, Longgang District, Shenzhen, China

For more information on this product, visit our website at [www.htmmobile.hu](http://www.htmmobile.hu) or [www.blaupunkt.com](http://www.blaupunkt.com).