

BLAUPUNKT
User Manual
Mobilephone TX60



Enjoy it.

CONTENT

Safety Instructions	3
Technical Details	5
Installation of THE Device	6
Insert the memory and SIM Card	6
Description of Device	6
Turn the device ON and OFF	6
Charging of the Battery	6
GETTING STARTED	7
Setup Wizard	7
Using The touch screen	7
Navigation Bar	8
Notification BAR	9
Customize your home Screen	9
handle apps	10
Delete or disable applications	10
Search applications	10
folders	11
GOOGLE™ Apps	11
Contacts	12
create a contact	12
Edit contact	12
Favourites	13
share a contact	13
FIX & Manage	13
Manage Calls	13
Make a Call	14
Answer a call	14
Decline a Call	14
Functions available during a call	14
Call history	15
Messages	15
Create Message	15
Delete message	16

Message settings.....	16
Settings	17
Network and internet	17
Wifi.....	17
Mobile Network	17
further network settings.....	18
Customize Your device.....	18
Notifications.....	18
Sound	19
Display and wallpaper.....	19
Language and input.....	19
Date and time	20
Security & Privacy	20
Security	20
Privacy.....	20
Passwords and Accounts.....	21
Safety and Emergency.....	21
Restore settings	21
Declaration of conformity.....	22

SAFETY INSTRUCTIONS

WARNING: Please read this guide carefully. Ignoring safety regulations is dangerous and may even be illegal, and the manufacturer does not accept responsibility for malfunctions resulting from improper use.

Safe power on

The owner of the device is responsible for the use of the device. Never turn on the device in a location where the use of wireless devices is prohibited or radio wave interference may be dangerous.

Road safety

Follow local laws and regulations regarding smartphone use while driving. If you do use the phone while driving, observe the following rules: concentrate on driving to be aware of traffic conditions; if the device has a hands-free function, use it hands-free. If the traffic situation requires it, pull over before answering the phone.

Interference

Wireless devices can be susceptible to interference that affects performance.

Electronic devices

To avoid demagnetization, do not leave your device near electronic devices for long periods of time.

Use in hospitals

Hospitals and other healthcare facilities may have equipment that is particularly sensitive to radio frequency signals. Turn off your phone if prohibited signs instruct you to do so or if requested to do so by hospital staff.

Electrical medical equipment

Your phone is a radio transmitter that may interfere with electronic medical devices or implants such as hearing aids, pacemakers, insulin pumps, etc. operation. We recommend that you keep a distance of at least 15 cm between the implant and the device, never carry your phone in your vest pocket. Follow the instructions of the medical device manufacturer. If you have a medical implant and have any other questions about the use of mobile or wireless devices, ask your doctor.

Use on the airplane

If your device supports airplane mode, please use this function on the airplane. If the device does not have an airplane mode, turn it off before take-off, as the device may cause interference on board. Follow the instructions posted on the aircraft.

Explosive and restricted areas

Switch off the device in explosive areas. Sparks in such places can lead to an explosion or fire, which can result in serious injury or death. Switch off the device at petrol or gas filling stations, especially near fuel pumps. Follow strictly at fuel storage facilities, chemical plants and places where explosive materials are stored the instructions.

Usage environment

The device complies with the recommended emission values for radio waves if it is kept at a distance of at least 1.5 cm from the ear. If you wear the phone in a case, belt buckle or holder, make sure that they do not contain metal and that they pull the phone slightly away from the body. If other accessories are used, operation in accordance with radio frequency guidelines cannot be guaranteed. If you are not using a case and holding the phone to your ear, keep your device at least 2.5 cm away from your body, especially during data transmission.

Appropriate use

Please do not attempt to disassemble the device. If the device is faulty, contact the distributor.

Battery and other accessories

Use only parts and accessories approved by the manufacturer. The use of non-factory accessories and parts may void the warranty. Do not short circuit the battery.

Charge the device in a well-ventilated and temperature-controlled environment, away from flammable and explosive materials. Handle the used battery in accordance with local regulations, do not throw it in the household waste.

Since the mains plug serves to disconnect the device from the electrical network, connect the device to an easily accessible mains socket.

Water resistance

The device is not waterproof, keep it dry. Precipitation, steam, and any other liquid or moisture can contain corrosive minerals that can corrode electronic circuits. If the device does get wet, turn it off.

Backup

Back up all data stored on your device.

Connect to another device

Before connecting an external device, read the safety instructions in the user manual. Do not connect an incompatible device.

Firmware versions

This device will only work with firmware versions approved for use by your service provider and device manufacturer. If unauthorized firmware is installed on the device, it may not work properly. Furthermore, the manufacturer is not responsible for malfunctions resulting from the use of unauthorized software.

TECHNICAL DETAILS

BASIC INFORMATIONS

Display	6.088 HD+ IPS 720x1560 px
Operating system	Android 12 Go edition
CPU	MT6769W
GPU	Cortex A53 Quad-core 1.3 GHz
Memory	2 GB (RAM) + 16 GB (ROM)
Wifi	802.11 b/g/n
Bluetooth	4.2
Battery	3000 mAh
Camera	13 + 0.3 MP hátsó, 5.0 MP első
GPS	igen, Galileo támogatás

NETWORK

GSM	900/1800 MHz
WCDMA	900/2100 MHz
4G LTE-FDD	B1/ B3 / B7/B20

POWER SUPPLY FEATURES

Manufacturer	Shenzhen New Four Seasons Electronic Co., LTD
Modell	SJWY-0501000
Input voltage	100-240V AC
Input AC frequency	50/60Hz
Output voltage	5.0V
Output current	1A
Output power	5W
Average active efficiency	74,98%
Efficiency at low load (10 %)	64,93%
No-load power consumption	0.08W

SAR VALUES: 0.618 W/Kg (Head) - 1.098 W/Kg (Body)

INSTALLATION OF THE DEVICE

INSERT THE MEMORY AND SIM CARD


Turn off the power and remove the back cover.

Insert the SIM card according to the mark on the device.

Make sure that the chip contact and the cut edge of the card are aligned in the correct direction.


Slide the card into the slot until it stops.

The device handles Nano SIM + Nano SIM + Micro SD cards.

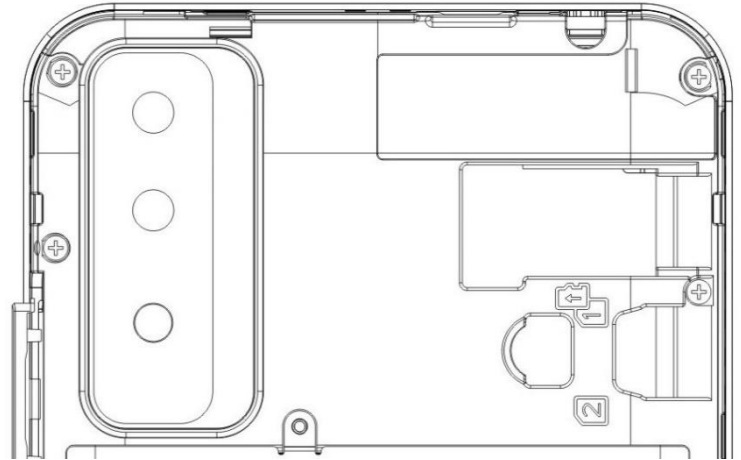

DESCRIPTION OF DEVICE

- 1 - USB port
- 2 - Earphone
- 3 - Main Camera
- 4 - Subcamera
- 5 - Vaku
- 6 - Volume +
- 7 - Volume -
- 8 - Power Key

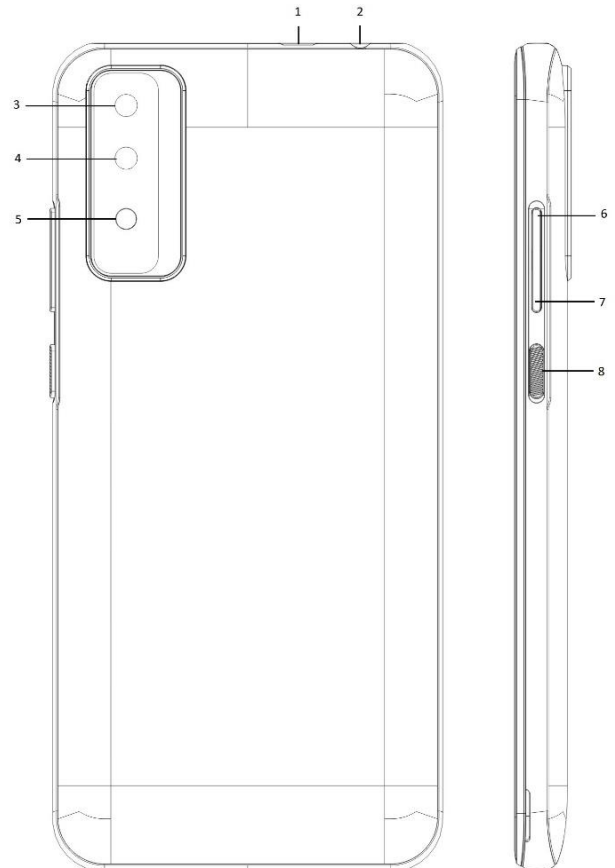

TURN THE DEVICE ON AND OFF

- Before turning on the device, fully charge the battery.
- Press and hold the On button - on the side of the device - to turn on the device.
- Long press the Power button, then select Power off from Options.

CHARGING OF THE BATTERY

- Before charging the battery, check that it is properly seated.
- Connect one end of the charger to the device.

- Connect the charger to the outlet.
- Charging starts regardless of whether the device is turned on or not.
- When switched on, the movement of the battery icon in the upper right corner indicates charging. When the movement stops, the phone is charged.
- When switched off, the movement of the battery icon on the screen indicates charging. When the movement stops, the phone is charged.
- Unplug the charger from the outlet.
- Unplug the charger from the phone.

GETTING STARTED

SETUP WIZARD

When you turn on the device for the first time, the Setup Wizard guides you through the basic settings of the device.

Follow the instructions:

- to choose language
- to connect to Wifi network



It may take a few minutes to prepare the phone the first time it is turned on.

- You can copy your data (apps, photos, contacts, Google account) from your old device.
 - select your old device
 - Follow the on-screen instructions
- To set up your device as new, sign in to your Google account.
- Choose a search engine
- For higher security, set a PIN code / Pattern / Password to lock the device: the PIN code must consist of 4 digits (not the same as the PIN code of the SIM card).
- As a last step, you have the option to customize the device even more: change the font size, change the background image, manage the lock screen data.


The device is ready for use. You can change the settings specified in the wizard at any time in the device's settings menu.

USING THE TOUCH SCREEN

The touch screen responds to the light touch from the pad of your finger or capacitive stylus. Pressing with excessive force or using a metal object on the touch screen may damage the surface of the screen, such damage is not covered by the warranty.

TAP

- Tap an item on the screen to select it and launch the application.

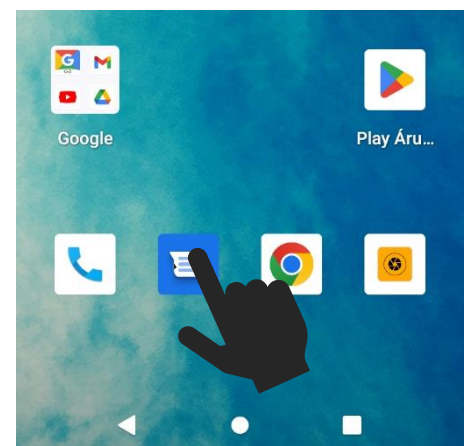


- With a long tap, you can open the app information.

SWIPE

- Lightly drag your finger across the screen.
- Swipe the screen to unlock the device.
- Swipe the screen to scroll through the Home screen or menu options.

MOVING ITEMS


- Touch and hold an item to move it.
- In menu mode, you can use this method to place an application on the home screen. Touch and hold an icon to move the app.

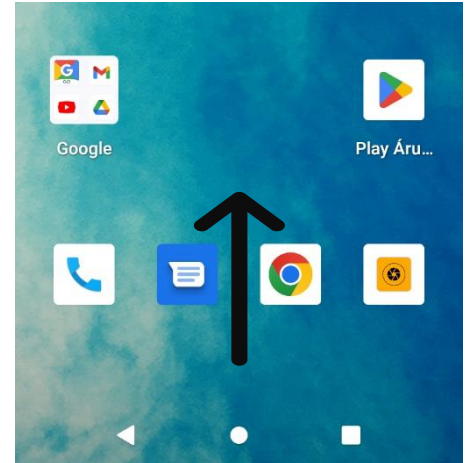

ZOOM IN AND OUT

A Bring your thumb and forefinger together or apart on the screen to zoom in and out.

- Move your thumb and forefinger apart on the screen to zoom in.
- Move your thumb and forefinger together on the screen to zoom out.

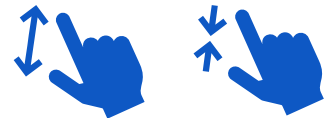

TOUCH AND HOLD

Touch and hold items to activate them.

- Touch and hold a field to display a pop-up menu of options.
- Touch and hold a Home screen to customize the Home screen.

SCREEN ROTATION

The orientation of the screen changes depending on which way you turn the device. This feature can be turned on and off in the notification bar and settings.

NAVIGATION BAR

Use the navigation buttons at the bottom of the screen to control your device.

- Applications: opens the list of recent applications.
- Home screen: return to the home screen. Long press to open the Google™ Assistant.
- Back: returns to the previous screen that was open.

NOTIFICATION BAR

The notification bar shows the device status and notifications.

Notification icons notify you of new messages and events. When a new notification arrives, its icon will appear in the notification bar.

To access the notification bar, swipe down from the top of the screen.

You can see notification icons in the left corner of the screen and status icons in the right corner.

You can toggle the following features on and off with a single click on the notification bar:

- Wifi
- Bluetooth
- Airplane mode
- Mobile data
- Screen recording
- Microphone
- Screen cast
- Hotspot
- Night light
- Location
- Auto rotate
- Alarm
- Nearby share

To close the notification bar, drag the bottom of the panel towards the top of the screen or press the back button on the navigation bar. The notification panel also closes when you reply to a notification.

CUSTOMIZE YOUR HOME SCREEN

When you log in to your device, the home screen will open. This is your starting point for accessing all the apps on your device.

This is where you can place your favorite apps and widgets, in addition to setting additional home screens, removing screens, changing the screen order, and choosing your main home screen.

ADD AND DELETE APPLICATIONS

Select the app you want to add to the Home screen. Hold it down and move it to the right place, then release.

To delete an icon, select the icon you want to delete, press and hold it, and move it towards the “Delete” option at the top of the screen.



Deleting the icon does not delete the application. This gesture only removes the app from the Home screen.

SET WALLPAPER

Customize the appearance of your device: choose your favorite images or pre-installed wallpapers to personalize your start and lock screens.



Touch and hold an empty area of the Home screen, then select Wallpapers. Select the photo you want to set as wallpaper, then select "Set Wallpaper" in the upper left corner of the screen.

Select which screen you want to apply the setting to:

- Home screen
- Lock screen
- Home screen and Lock screen

ADDITIONAL HOME SCREEN SETTINGS

Additional settings for the screen can be made in the **Settings > Display** menu, where you can choose from the following options:

- Brightness level
- Dark theme (switch on and off with the slider)
- Night light (you can turn it on and off with the slider)
- Screen timeout
- Automatic screen rotation
- Advanced (font size, display size, screen saver, lock screen)

HANDLE APPS

The following applications are pre-installed on the device: Chrome, Drive, Duo, Files, FM Radio, Gallery, Gmail, Google Go, Google TV, Voice recorder, Camera, Messages, Calendar, Contacts, Clock, Play Store, Assistant, Calculator, Phone, Map, Youtube, YT Music.

You can access these apps from the Apps screen by swiping up on the Home screen.

You can get additional Apps from the Google Play™ Store.

DELETE OR DISABLE APPLICATIONS

You can delete applications from the device, with the exception of pre-installed applications: they can only be disabled in many cases. Disabled applications are turned off and are not visible in the application list.

Touch and hold the icon of the app you want to delete / disable, then open the App Info menu item. Select "Remove" or "Disable". Follow the on-screen instructions.

SEARCH APPLICATIONS

If you're not sure where to find an app or setting, use the device's **Search feature**.

- In the Applications menu, start typing a word. As you type, relevant results appear on the screen.
- Touch the corresponding match to open the application.


FOLDERS

You can create folders on the Home screen to organize your apps.

CREATE A FOLDER

- Touch and hold the app icon, then drag it over another app that you want to share it with.
- Release the icon above the selected application to create the folder.
- To name the folder, click on the folder and select “Change name”: type the desired name.
- You can add more applications to the folder by repeating the first two steps.
- Press the Back button to close the folder.

DELETE A FOLDER

- If you want to remove an application from the folder, open the folder.
- Touch and hold the icon of the app you want to uninstall.
- Drag to the top of the screen to delete.
 Deleting the icon does not delete the application. This gesture only removes the app from the Home screen.
- To delete an entire folder, touch and hold the folder and move it to the top of the screen to delete.

GOOGLE™ APPS

The following Google apps may be preloaded on your device. Apps can be downloaded from the Google Play™ store.

CHROME



Browse the Internet with Chrome™ and bring your open tabs, bookmarks, and address bar data from your computer to your mobile device. Visit support.google.com/chrome to learn more.

DRIVE



Open, view, rename, and share files saved to your Google Drive™ cloud account. Visit support.google.com/drive to learn more.

GMAIL



Send and receive email with Google’s web-based email service. Visit support.google.com/mail to learn more.

GOOGLE TV



Watch movies and TV shows purchased from Google Play. You can also view videos saved on your device. Visit support.google.com/googletv to learn more.

MAPS



Use Google Maps for navigation and other location-based information. Location must be enabled to use the map (see Notification bar). Visit support.google.com/maps to learn more.

GALLERY



In Gallery™, you can view photos and videos on your phone and SD card. Search through your photos faster thanks to automatic sorting. Visit support.google.com/android to learn more.

PLAY STORE



Find new apps, movies, TV shows, books, and games in the Google Play Store. Visit support.google.com/googleplay to learn more.

CONTACTS


You can store and manage your contacts in the Contacts application. You can sync with your personal account that you added to your device.

CREATE A CONTACT

- Open the **Contacts** application.
- Click the + icon.
- Select the save location in row “Save to”
- Fill in the required information (First name, surname, company, Phone). You may also add picture.
- Press "**Save**" in the upper right corner of the screen.

EDIT CONTACT



When editing a contact, you can change or delete information or add additional fields to the contact information.

- Open the **Contacts** application and choose the contact to edit.
- Tap  edit .
- Touch the field you want to edit.
- Press “Save”.

FAVOURITES

Your contacts marked as favorites are arranged at the top of the Contacts list. You can also access your favorite contacts more easily in the Phone application: these contacts are displayed in the Speed Dial.

Open the **Contacts** app and tap the contact you want to favorite.

- Tap  to add the contact to Favourites
- Tap  to remove contact from Favourites.


SHARE A CONTACT

Share your contacts in one of the many options.

- Open the Contacts app and tap the contact you want to share.
- Click More options in the upper right corner of the screen and select Share.
- Choose which app or feature you want to share the contact through.

FIX & MANAGE

Open the **Contacts** app, then tap **Fix & Manage**.

- Merge and fix: you can merge your duplicate contacts and add more details to contact details.
- Import from SIM: transferring the contacts stored on the SIM card to the phone.
- Restore contacts: you can restore your previously saved contacts from backup.
- Import from/export to file: You can import / export your contacts in vcf format to a designated folder.
- Bin: delete the selected Contact.
- Settings:
 - Your info: you can save your own contact data in this menu item.
 - Accounts: you can manage your saved passwords and e-mail accounts in the Passwords and Accounts menu. In this menu item, it is possible to add an additional e-mail account.
 - Display: select theme (light / dark / default system setting)
 - Edit contacts: select a default account to save new contacts.
- Blocked numbers: you can block calls from unidentified callers or in “Add number” menu you can add number manually.
 You won't receive calls or texts from blocked numbers.

MANAGE CALLS

You can make calls using the **Phone application**. In the Phone application, you can access the following functions:

- Speed dial
- Call history
- Contacts (more information in Contacts menu)

- Settings

MAKE A CALL

Use your device to make and receive calls from the Home screen.

In the **Phone** menu, enter the number you want to call in the dialer and press the green phone icon.

MAKE A CALL FROM RECENTS

The device stores all incoming, outgoing and missed calls in the Call list.

In the Phone menu, open the History menu item and select the number you want to dial from the list.

Press the green phone icon to dial.

MAKE A CALL FROM CONTACTS

You can also start a call from the **Contacts** menu. Select the contact you want to dial, then press Call after opening it.

ANSWER A CALL

When a call comes in, the phone will ring (depending on the setting) and the caller's phone number or name will appear on the display. Swipe up on the phone icon to answer the call.

DECLINE A CALL

You can also choose to reject an incoming call. With the screen unlocked, press Decline.

On the Incoming call screen, drag the phone icon down to reject the call.

DECLINE WITH A MESSAGE

Lehetősége van a bejövő hívást SMS üzenetben is elutasítani. A bejövő hívás képernyőn, húzza az üzenet ikont felfelé és válassza ki az elküldeni kívánt üzenetet.

END A CALL

Press the red phone icon to end the call.

FUNCTIONS AVAILABLE DURING A CALL

You can adjust the call volume, switch to device or speaker, and even perform other tasks during a call. The following functions are available during a call:

- Mute
- Keyboard
- Speaker
- Record a call
- Waiting

You can increase or decrease the volume using the volume buttons on the side of the device.

CALL HISTORY

The device stores all incoming, outgoing and missed calls in the Call list. To open the call list, go to **Phone > Call History**, where a list of recent calls is displayed. If the caller is in the contact list, the saved name will be displayed.

SAVE A NUMBER FROM THE CALL HISTORY

Use your history to create a new contact or update an existing contact list.

- Go to **Phone > Call History**
- Touch the call you want to save information from
- Create a new contact or edit an existing one.

DELETE CALL HISTORY

- Go to **Phone > Call History**
- Long press the call you want to delete.
- Select Delete.

BLOCK NUMBER

- Go to **Phone > Call History**
- Select the number you want to block
- Select block number.

SPEED DIAL

You can add frequently dialed numbers to the Speed Dial list for easy access. You can find more information in the Contacts/Favorites menu item.

EMERGENCY CALL

You can dial the emergency number for your region, regardless of the phone's service status. If the phone is not activated or does not have a SIM card, you can only make an emergency call.

In the Phone menu, enter the emergency phone number (in Hungary: 112), then tap the Call button.

End the call. You can access most in-call features during this type of call.

TIP The emergency number can be dialed even when the phone is locked, so anyone can use their phone to call for help in an emergency. If accessed from a locked screen, only the emergency call function is available to the caller. The rest of the phone remains safe.

MESSAGES

Keep in touch with your friends using the **Messages** app to share photos, send emojis, or just say hello. Available options may vary by service provider.

CREATE MESSAGE

- To write a message, open the **Messages** application.
- Select Start Chat.
- Start typing the recipient's name or phone number (if you previously saved it in Contacts, the device will automatically offer contacts that match the search).

- Enter the text and press Send.
- You can add files (eg picture, contact) to the message by touching the + icon

DELETE MESSAGE

You can remove the message history by deleting conversations.

- Open the Messages app.
- Select the conversation you want to delete.
- Touch and hold it, then press the delete icon in the upper right corner.

MESSAGE SETTINGS

In this menu item, you can configure the settings for text and multimedia messages.

- Open the **Messages** app.
- Select more in the upper right corner, then go to **Settings**.
- The following settings are available:
 - Chat features: in this menu item - with the help of the slider - you can switch the following functions on and off:
 - Enable chat functions (use Wifi or data connection for messaging if possible)
 - Send read receipts
 - Show typing indicators
 - Automatic resend as a text message (switch from chat if a message cannot be sent)
 - Notifications: in this menu item, you can control the notifications sent by the Messages application.
 - Hear outgoing message sounds
 - Pinch to zoom conversation text
 - Your Current country
 - Automatic previews
 - Spam protection
 - Advanced
 - Group messaging
 - Automatic MMS download
 - Automatic MMS download when roaming
 - Use of simple characters
 - Setting SMS delivery reports
 - Wireless emergency alerts
 - Messages on the SIM card
 - SMSC (message center number)
 -

SETTINGS

In the Settings menu, you can manage the operation of the various functions of the device, as well as the possibility to customize them.

NETWORK AND INTERNET

You can set up connections to different types of Wi-Fi networks and hotspots, manage your saved networks, and find your device's network addresses.

Use Mobile networks to configure your device's ability to connect to mobile networks and use mobile data. Options may vary by service provider.

WIFI

You can connect your device to a Wi-Fi network to access the Internet without using your mobile data.

- Use the slider to turn on Wifi access.
- Choose which network you want to connect to
- Enter the password for the network.

By clicking on the settings icon next to the Wi-Fi network, you can choose from the following options in the network information menu:

- Forgets – the device forgets the given Wi-Fi network
- Disconnect – disconnect from the given network
- Share – share network data using a QR code
- Automatic connection – if this menu item is active, the device automatically connects to the network within range.

In the network information menu, you can also view the network data, such as: signal strength, frequency, security, IP address, subnet mask, DNS, speed.

MOBILE NETWORK

Use Mobile networks to configure your device's ability to connect to mobile networks and use mobile data. Options may vary by service provider.

You can access the mobile network settings in **Settings > Network and Internet > Mobile networks**:

- Mobile data - here you can enable data access via mobile network
- Roaming - connection
- Application data usage – in this menu you can check how much data you have used in a given period.
Attention! The billing units of mobile service providers may differ from this.
- Data warning & limit - in this menu item, you can set the start day of the mobile data usage cycle, and you can set how much data the device sends a warning after using.
Attention! Data traffic warnings and restrictions are measured by the device. This may differ from the provider data.
- Advanced

- **VoLTE** – when turned on, your device uses LTE to improve voice and other communications.
- **Preferred network type** - you can choose whether the device uses a 4G (recommended), 3G or 2G network.
- **Automatic network selection** - if active, the device automatically selects the
- **Access Point Names** - Select or add APNs that have the network settings your device needs to connect to your provider (Internet, MMS).

FURTHER NETWORK SETTINGS

- **Airplane mode**

Airplane mode turns off all network connections, including calling, texting, mobile data, Wi-Fi, and Bluetooth. While Airplane Mode is enabled, you can turn on Wi-Fi and Bluetooth in Settings or the Notification bar. You can activate airplane mode with the slider in **Settings > Network & Internet > Airplane mode** or in the Notification bar.

- **SIM cards**

Your wireless carrier and service plan may support dual SIM (two physical SIM cards) so you can manage two mobile accounts without carrying two devices. Options may vary by service provider. Dual SIM devices have two SIM card slots. A microSD card slot may be available to expand storage if supported. In this menu item, you can view, enable, disable or rename the SIM card that is in the device. You can also choose a preferred SIM card for mobile data, calls and SMS here.

- **Hotspot and tethering**

You can use hotspot and tethering to provide internet to other devices using a mobile data connection. Enable Wifi hotspot in **Settings > Network & Internet > Hotspot & Tethering > Wifi hotspot**. In this menu, you can change the name of the hotspot as well as its password. In addition to the Wi-Fi hotspot, you can also share your phone's Internet connection via Bluetooth.

CUSTOMIZE YOUR DEVICE

In the Settings menu, you can customize the appearance of your device by setting a unique wallpaper or ringtone.

NOTIFICATIONS

In **Settings > Notifications** you can manage the notifications sent by different applications.

- **Manage**

- App settings – control notifications from individual app.
- Notification history – show recent and snoozed notifications.

- **Conversation**

You can view or delete recent conversations in this menu item. By clicking on the last conversation, you can choose from other options:

- Priority of the notification: Priority, Default, Silent

- You can customize how the notification appears on the screen: Pop-up notification, Lock screen, Show notification dot.
- **Privacy**
 - Device & app notifications – control which apps and devices can read notifications
 - Notification on lock screen – you can set whether notifications appear on the lock screen.
 - Sensitive notifications – show sensitive content when locked.
- **General**
 - Do not disturb – receive notifications only from important people and apps. If the do not disturb mode is active, you can set which people or applications the device receives signals from. In Do Not Disturb > Schedule, you can set automatic intervals when Do Not Disturb turns on:
 - Sleeping: you can set which days and until when the schedule should be active.
 - Event: apply a schedule to events recorded in the Calendar.
 - Wireless emergency alerts – in this menu item you can enable wireless alerts.
 - Hide silent notifications in status bar
 - Allow notification snoozing
 - Notification dot on app icon
 - Enhanced notifications

SOUND

In this menu, you can make the following settings:

- Volume – you can set media, call, notification and alarm volume
- Do not disturb - see Notifications menu item
- Ringtones – in Settings > Sound, you can set different ringtones for the phone, notifications, and the alarm clock. You can also activate sound for the following functions: dialer, screen lock, charging, touch.

DISPLAY AND WALLPAPER

In **Settings > Display** menu you can set followings:

- Brightness level
- Dark theme
- Night Light
- Wallpaper – you can choose a wallpaper from the Gallery or from the factory wallpapers. You can set a separate wallpaper for the lock screen and the home screen.
- Screen timeout – choose from installed values (15s, 30s, 1p, 2p, 5p, 10p, 30p) how much inactivity the screen will go dark.
- Auto-rotate screen
- **Advanced** – font size, display size, screen saver, lock screen settings

LANGUAGE AND INPUT

In **Settings > Language and input** you can find following options:

- **Language** – selecting the language of the device. Tap the + icon to add more languages from the list.
- **On-screen keyboard** – settings of on-screen keyboard:
 - Keys – number row, show emoji-switch key, show language switch key
 - Layout – one-handed mode, keyboard height
 - Keypress settings: sound, haptic feedback, vibration strength, pop-up, long-press of symbols
 - Further settings: theme, text correction, glide typing, voice typing, clipboard, dictionary
- **Tools** – spell checker, personal dictionary, pointer speed, text-to-speech output

DATE AND TIME

In **Settings > Date & Time**, you can choose whether to use the Automatic (network-provided) time zone or set the date and time manually..

SECURITY & PRIVACY

SECURITY

In this menu, you can check the security status of the device, as well as increase the protection of your data by activating various security functions.

- **Find my device**
Find my device function helps to locate the device remotely, and if you lose the device, it also helps to keep the data safe.
- **Screen lock**
To protect your data, you can set a pattern, PIN or password to unlock the screen.
- **Smart Lock**
You can keep your phone unlocked in certain trusted locations or near your connected devices.
- **SIM card lock**
In this menu, you can switch the PIN code request for the SIM card on and off, as well as change the PIN code of the SIM card.

PRIVACY

In this menu, you can set which applications have access to your data, and you can turn the following accesses on and off:

- Camera access
- Microphone access
- Show passwords – displays characters briefly as you type
- Auto-fill service from google – saved passwords, credit cards, addresses

PASSWORDS AND ACCOUNTS

- **Passwords**

In this menu, you can save and manage your passwords to your Google account, as well as create new ones to make it easier to sign in to websites and apps.

In the password manager, you can search among the passwords saved for applications, as well as check your passwords.

- **Auto-fill service**

Automatic filling of forms based on the data stored in your Google account. Before choosing this feature, make sure the app is trustworthy.

You can add a new email account to your device by touching the **+ Add account** option in the passwords and accounts menu.

SAFETY AND EMERGENCY

You can activate the following functions in this menu item (some functions may not be supported in your region):

- Emergency SOS
- Location services in an emergency
- Earthquake alerts
- Wireless emergency alerts
- Silence notifications while driving

RESTORE SETTINGS

You can reset your device in the **Settings > System** menu:

- Reset wifi, mobile & bluetooth: this will rset all network settings.
- Reset app preferences – this will reset all preferences for disabled apps, disabled app notifications, default applications for actions, background data restrictions for apps, any permission restrictions. You will not lose any app data.
- Erase all data (factory reset) – this will erase all data from your phone’s internal storage, including your google account, system and app data and settings, downloaded appsm music, photos, other user data.

To erase all data, enter your device's password (pattern, PIN code) that you set to lock the Screen.

Attention! Before erasing all data from your device, make a backup in **Settings > System > Backup**.

DECLARATION OF CONFORMITY

The Blaupunkt TX60 model complies with the essential requirements and relevant provisions of the 2014/53/EU Directive and RoHS Directive 2011/65/EU. The Declaration of Conformity is available on our website.



Designed and Engineered by

Blaupunkt Competence Center Mobile Europe

HTM Mobile Kft.

1118 Budapest, Dayka Gábor utca 3. Hungary

Assembled in P.R.C by

COOMI TECHNOLOGY LIMITED

RM 1501(762), 15/F SPA CTR 53-55 LOCKHART RD WANCHAI, HONG KONG, CHINA

Google, Android and other marks are trademarks of Google LLC.