

# User Manual

## Mobile Phone V24



*Enjoy it.*

# CONTENTS

<b>GENERAL INFORMATION</b>	<b>3</b>
<b>SAFETY</b>	<b>3</b>
<b>PRODUCT SPECIFICATIONS</b>	<b>5</b>
<b>ABOUT THE KEYS</b>	<b>6</b>
<b>GETTING STARTED</b>	<b>6</b>
Insert SIM card	6
Insert SD card	7
Insert battery	7
Remove battery	7
Charging the battery	7
Maintaining the battery	7
<b>POWER ON/OFF</b>	<b>8</b>
<b>CALL FUNCTIONS</b>	<b>8</b>
Make a call	8
Receive a call	8
Emergency call	9
Conference call	9
Available functions during the call	9
Viewing / dialling missed calls	9
Dial a previously called number	10
Speed dial	10
<b>MAIN MENU</b>	<b>10</b>
Contacts	10
Messages	11
Call logs	12
Call settings	12
Settings	13
Audio player	15
Multimedia	15
FM Radio	16
User profiles	16
File manager	17

Organizer .....	17
Alarm.....	17
Camera.....	18
<b>Declaration of conformity .....</b>	<b>18</b>

## GENERAL INFORMATION

Thank you for purchasing the product.

Our mobile phone meets the GSM network standards and the most stringent European standards.

This device can be used on various international networks, depending on the roaming rules of your service provider. To use the device, GSM service is required, provided by your service provider for a fee.

Many features of the device depend on the services provided by the network service provider.

For more information, please contact your service provider.

The user manual has been manufactured by the manufacturer and is not responsible for any printing, typing errors or changes, and may not be warranted to change the device without prior notice.

Trademarks and copyrights mentioned in this document are the property of the current owner, copyrighted or partially copyrighted material is strictly prohibited without the prior permission of the holder.

We recommend that you read this guide carefully before using your device to use your device under the best conditions.

## SAFETY

### Safety regulations

Please read the safety instructions carefully, as ignoring it may be dangerous or illegal.

The owner of the device is responsible for the use of this appliance. Do not switch on the device, where it is prohibited to use a mobile phone or to interfere with radio waves.

### Airplane

When traveling via airplane, your device must be switched off whenever the crew or warning signals are instructed to do so. Using a mobile phone may be dangerous to the operation of the aircraft and may interfere with network communication. Use of the device despite the ban may have legal consequences.

### Explosion hazards and restricted areas

Turn off the device in explosion hazardous areas. Sparks in such places may lead to an explosion or fire that may result in serious injury or death. Turn off the device at gasoline or gas filling stations, especially near the fuel pumps. Follow the instructions strictly in locations such as fuel tanks, chemical plants, and explosive substances.

### Electronic devices

To avoid demagnetisation, do not leave your device for a long time close to electronic devices.

### Electrical medical devices

Your phone is a radio transmitter that can interfere with electronic medical devices or implants such as hearing aids, pacemakers, insulin pumps, and so on. We recommend that you keep a distance of at least 15 cm between the implant and the device, never wear your phone in the breast pocket. Follow the instructions of the manufacturer of the medical

device. If you have a medical implant and have any other questions about using mobile or wireless devices, ask your doctor.

### **Use in hospitals**

Hospitals and other healthcare facilities can use devices that are particularly sensitive to RF signals. Switch off your phone if prohibited signals are instructed to do so, or hospital staff ask for it.

### **Road safety**

Observe the local laws and regulations regarding smartphone usage while driving. If you make a phone call while driving, observe the following rules: Focus on driving to become aware of traffic conditions; If the device has a hands-free function, use handsfree. If the traffic situation requires, stop the car before you pick up the phone.

### **Use environment**

The device complies with the recommended emission values for radio waves when kept at a minimum distance of 1.5 cm from the ear. When carrying the phone in a case, belt clip or holder, make sure that it does not contain metal and that the phone is slightly distracted from the body. When using other accessories, it is not possible to operate in accordance with radio frequency guidelines. If you do not use a case and do not hold the phone on your ear, keep it at least 2.5 cm away from your body, especially during data transfer.

### **Note on using this unit**

- Do not place the device close to magnetic cards or other magnetic devices. The phone's magnetism can erase the data found on the disc on the card.
- Wired telephone, television, radio may cause interference and may affect the operation of the mobile phone.
- Keep the appliance dry, all moisture may damage the electrical circuits.
- Keep the unit away from extreme temperature conditions.
- Keep the appliance away from places where the temperature can reach 60 ° C, such as dashboard, window sill, fire, burning cigarette.
- Do not paint the appliance.
- Do not shake the appliance, do not drop it or crush it.
- Do not disassemble or modify the phone as this may damage the phone, which may cause leakage, which interrupts the internal circuits.
- Clean only the phone with a damp or non-static cloth. Do not use alcohol, thinner, benzine or other chemical, scouring agent to clean the appliance.
- The product may become warm during normal use or during charging. Do not leave the phone in a discharged state for a long time as it may cause data loss.
- Metal parts of the device may cause skin irritation.
- Do not put the device in the back pocket if it is damaged, damaging the phone. Do not put the device in the bottom of the bag as it may break.
- If the phone is in vibrating mode, place it in a place where it can not fall off during vibration.
- Do not press the display with a needle or other sharp object, as it may damage the LCD display, because it may cause the loss of warranty.
- Store the device in an appropriate location when not in use. Keep away from children.
- If the device is lost or stolen, contact your network service provider immediately to prevent the SIM card from being used by unauthorized persons. The service provider may ask for the IMEI number of the device that you can find on the battery sticker or by dialing the code \*#06#. Record this number if you need it in the future.
- To prevent unauthorized use, lock the SIM card or the device, change the passwords if necessary.
- Always switch off the appliance before removing the battery. Otherwise, it may cause data loss.
- When leaving your vehicle, carry the appliance or put it in the glove compartment to prevent theft.
- Keep the device, battery, and charger away from children.

### **Notes on using the battery**

- Do not disassemble or modify the battery as this may cause leakage, overheating, or explosion.

- Do not dispose of the battery in a fire as it may cause an explosion. Dispose of the old battery according to local regulations. Do not throw it into household waste.
- Do not short circuit the battery circuits with a needle or other metal object as it may cause leakage, overheating or explosion.
- If the battery liquid goes into the eyes, it may cause blindness. If this happens, do not rub your eyes, but rinse with water and seek medical attention immediately.
- If the battery liquid make contact with the skin, it may cause burns on the skin. Wash your skin with clean water and consult a physician immediately.
- Do not take the battery in your mouth as it may be poisonous.
- Do not continue to use the battery if it finds too hot or has changed its color or shape.
- Keep the battery dry.
- Do not store the battery near fire or other hot places. Store the battery in a cool, well-ventilated area and do not expose it to direct sunlight.
- Do not charge the battery for more than 24 hours.
- The battery can be charged for hundreds of times, but each charge will shorten its life and wear out after a while.
- When replacing a battery, use only a battery approved by the manufacturer. Using an incorrect battery may result in a warranty.

#### **Qualified service**

The product can only be repaired by a qualified person.

#### **Hearing protection**

To avoid hearing loss, do not listen to music or radio for a long time at high volume.

#### **Water resistance**

The appliance is not waterproof, so keep it dry.

## PRODUCT SPECIFICATIONS

The device handles 1 mini (normal) and a micro SIM card.

#### **Power supply features:**

- Input: (AC), 100-240 V - 50/60 Hz – 0.2 A
- Output: (DC), 5 V – 0.5 A – 2.5 W

**Battery type and voltage:** Li-ion akkumulátor, 3.7 V, 1000 mAh

**Network:** GSM 900/1800 MHz

**SAR values:** 0.491 W/Kg (Head) - 1.120 W/Kg (Body)

**Note:** Actual operating conditions depend on local conditions, network environment and user habits.

## ABOUT THE KEYS

**1. Left soft key / Right Soft key:** opens the menu item in the left / right corner of the screen.

**2. Dial key:** dial / answer the call, and in standby mode open the call lists.

**3. End / Power off button:** Press and hold to turn the power on and off; briefly press it down, reject a call, or quit it from the menu.

**4. Ok button:** press to execute the indicated function. In standby mode, press to open the selected link.

**5. Navigation key:** Press up / down / left / right directions to scroll through the menu. In standby mode, press the up / down / left / right arrows to access the quick menu at the top of the screen and press OK to execute.

**6. 0-9 alphanumeric keypad:** press the corresponding keys to enter numbers when dialing or characters corresponding to numbers when writing text.

In standby mode: by long pressing one of the buttons from "2" to "9", you can use the speed dial function (if you have set it in the menu [Phonebook / Phonebook settings / Speed dial]).

**7. \* (Star) button:** in standby mode, long press the \* key to lock the keyboard. Press the \* button twice to display the "+" international call sign.

**8. # (Dual cross) button:** in standby mode, long press to activate/deactivate Silent Mode.




## GETTING STARTED

### INSERT SIM CARD

To use your phone, you need to insert a valid SIM card to connect to the GSM network.


To avoid missing or damaged the contents of the SIM card, please DO NOT hold the metal part of the SIM card with your hands free and keep it away from electromagnetic devices. If the SIM card is damaged, it can not be connected to the GSM network. Before inserting or removing the SIM card, make sure that the device is turned off and the back of the device removed.

Note: Locate the SIM card slot on the back of the device and in the direction of the signal, with the collisions slide the card.

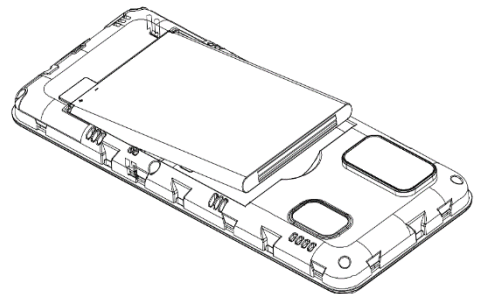

---

## INSERT SD CARD

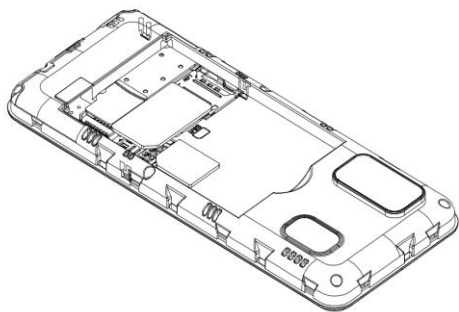

The memory card is not part of the basic package, but the memory of the device can be expanded with an SD card. Please make sure that the memory card is inserted correctly before use.

Note that the device may shake, the memory card may slide out of the slot, so please do not bend it, scratch the memory card or expose it to static electricity or dust, do not immerse it in water. Place the memory card in the slot on the back of the phone, with its chip facing down, as shown on the device.

Please be careful when using a memory card, especially when it is removed. Some memory cards must be formatted with a computer before use.

---

## INSERT BATTERY

1. Insert the battery chip into the protruding metal point in the battery slot, insert the battery, and push the top down until the battery engages in the recess.
2. Put back the back cover.

---

## REMOVE BATTERY

To remove the battery, turn off the device, remove the cover and then remove the battery at the top.

Note: Please remove the battery when it is switched off, as it may cause abnormal operation when the device is switched on.

---

## CHARGING THE BATTERY

Connect the charger to the appliance and plug the other end into the socket. If the device is turned on while charging, the battery icon will move in the right corner of the display. Charging is completed when the charging indicator on the top right is lit. If charging is switched off, a charging indicator appears on the display. When charging is complete, unplug the charger from the unit.

Note: When the battery voltage is low, a warning message is displayed on the display. Charge the battery as soon as you can, to avoid any inconvenience, the device can be switched off during a telephone conversation. Your device can automatically turn off when the power level is too low.

1. If you use the battery at a persistently low charge, it may adversely affect the battery life and quality.
2. Use only the charger approved by the manufacturer for proper operation.
3. Do not remove the battery during charging.
4. Fill the unit for at least 4 hours before first use. This can increase the efficiency of the multiple charge and discharge cycles.

---

## MAINTAINING THE BATTERY

The device has a rechargeable battery. When not using the charger, disconnect it from the power source. For more than a week, do not leave the phone charging. Temperature influences battery capacity. Battery may need to be cooled or warmed up before charging. If the battery temperature is lower than 0 °C or higher than 45 °C, do not charge the battery. Use the battery according to its intended purpose. Do not short-circuit the battery terminals. Do not use a damaged battery. If you are using an appliance under extreme temperature conditions, the battery will not work properly and its life span will be reduced. DO NOT throw the battery into fire, follow local laws and regulations regarding the disposal of the spent battery.

## POWER ON/OFF

Press and hold the **End / On-Off** button to turn the unit on or off.

1. If a SIM card is not inserted, it is defective or not fit correctly, a warning message will be displayed after switching on the display. Turn off your device and make sure the SIM card is inserted correctly.
2. If you insert the SIM card into the device, the PIN request and the phone password are active, the device prompts you for the password and PIN code and switches to standby mode.

After switching on, the phone automatically searches for the network. If the device has found the allowed network, it will display its name and signal strength.

If your device does not find a suitable network, you can only make an emergency call or access non-network services on your phone.

## CALL FUNCTIONS

If you have completed the steps in the previous chapter, the machine is ready to make and receive calls. For more information about call origination and basic call functions, see this chapter.

Note: If you are using a headset, gently insert and unplug the jack plug to avoid possible injury.

---

### MAKE A CALL

In standby mode, press the appropriate number keys to enter the phone number you want to call, press right soft key to delete incorrect numbers, press left soft key or dial key to start the call if the entered number is correct.

To enter an international phone number format, press the [\*] key twice until the international call sign "+" appears on the display.

---

### RECEIVE A CALL

When you have an incoming call, the device will alert you in the appropriate way, if your service provider supports calling number display, the display will show the caller's number or the name of the caller (depending on whether it was previously saved in the phone book).

1. Press the dial key or the left soft key and answer the incoming call with [Options] > [Answer].
2. If the answer any key function is active [**Menu / Settings / Call settings / Advanced settings / Answer Mode / Any key**], you can answer the call with any button, except the right software button and the End/Power button.
3. When the earphone is connected to the device and the [Auto answer with headset] function is activated [**Menu / Settings / Call settings / Advanced settings / Answer Mode / Auto answer in headset mode**], incoming calls will be automatically answered by your phone after 5 seconds of vibration or ringing.
4. If you do not want to answer the call, press the **End/Power** button to reject the call. You can also use the End/Power button to end the call.



5. During a call, you can use the up/down navigation keys to decrease or increase the speaker volume.

---

## EMERGENCY CALL

You can immediately make an emergency call without a SIM card. Different networks can use different emergency numbers, so please contact your network operator.

---

## CONFERENCE CALL

If supported by the network, multiple party calls can be made. In Idle mode, enter the phone number in the area code, in international format.

To dial, press the call key.

To add a new call, enter the second phone number and dial the desired number. You can also make a new call from the contacts stored in the phone book; during this active call, press Options, select Phonebook, locate the contact you want to dial, and then press the call key. When the call is back up, press Options and select Conference. You can repeat the above steps to add more calls.

---

## AVAILABLE FUNCTIONS DURING THE CALL

Some operations and services are available during an active call. Many of these depend on network support, please check with your network service provider for these options.

Press the right soft key to activate Handsfree during an active call; Similarly, you can reset the call to the handset.

Press the left soft key [Options] to access the services that can be used during the active call, which are the following (some features can only be used under special conditions):

**Hold:** You can hold an active call or keep it from hold.

**End a call:** Aborts the active voice call.

**Phonebook:** Open Phonebook during a call

**Call list:** view call history.

**Messaging:** You can enter the Messages menu.

**Voice Recorder:** Record the ongoing conversation after activating this option. Use an SD card.

**Mute:** You can mute your device's microphone when you need to make a conversation while you are on the call so that someone on the other side of the line does not hear it.

**Volume:** Use the up and down navigation keys to control the volume of the call.

**\*Replacement:** You can exchange the held and active calls.

**\*Conference:** Combine calls.

Note: The menu items marked with [\*] only work under special conditions. Such as: "Replace", which can only be achieved if one of the calls is held on the other active. To access the conference call, you need a service that you can activate with your network operator.

---

## VIEWING / DIALLING MISSED CALLS

The device displays missed calls on the display. To dial a missed call, press the (left) <View> key, then to dial the number, press the call start key or Options > Call.

---

## DIAL A PREVIOUSLY CALLED NUMBER

To display the most recently dialed numbers, press the call key in standby mode. Select the phone number you want to dial, and press the call key again or Options > Call.

---

## SPEED DIAL

Speed dialing allows you to dial a specific phone number by pressing and holding a button on your mobile phone's keypad. You can edit the service settings (the list of your favorite contacts) in the Phonebook / Phonebook settings / Speed dial menu item.

In standby mode, you can use the speed dial function by long pressing one of the buttons from "2" to "9".

## MAIN MENU

In standby mode, press the left soft key to enter the Menu. Within the Main Menu, you can access a number of functions and operations: Contacts, Messages, Call Logs , File Manager, Multimedia, FM Radio, Music Player, Camera, Alarm, Settings, Organizer, User Profiles.

---

## CONTACTS

In standby mode, you can enter the Phonebook with the right soft key or you can access it in the menu item **Menu>Contacts**. Here you can store and edit contacts.

The number of contacts that can be stored on the SIM card depends on the capacity of the card. You can store 500 contacts in the phone memory. By entering the phonebook, you can view all contacts (stored on the SIM card and device).

A different icon indicates which contact is saved to which storage location.

You can search for the given contact by entering the first letter of the contact.

After searching for the contact, you can call the given number by pressing the **Dial button**, and disconnect the line by pressing the **End/On/Off button**.

### Add a new contact

In standby mode: enter the phone number, then select (left) Options > Save to contacts.

Choose where to save the contact (SIM card or phone) or enter the name for the phone number (Options > Done).

To save, press the Options (left) softkey (Save).

In Phonebook mode: Entering the menu, the very first menu item: Add new contact.

In **Contacts** menu, the left softkey[Options] provides the following options:

- **View:** View contact details
- **Send text message:** you can send a message to the phone number of the selected partner.
- **Call:** calls the selected phone number.
- **Edit:** Change contact information
- **Delete:** Deletes the selected contact.
- **Copy:** You can copy the selected contact from the device to the SIM card and vice versa.
- **Add to blacklist:** block inquiries from a phone number.

- **Mark several:** allows you to select multiple contacts at the same time.
- **Contacts settings:** additional phonebook settings: Preferred storage, Speed dial, Memory status, Copy contacts, Move contacts, Delete all contacts.

---

## MESSAGES

Message service is a network-dependent service that enables sending SMS. Contact your network operator for more information.

### Write a message

Functions: Write, save and/or send a new message to the recipient.

In menu mode, select Messages > Write message.

Note: in order to send SMS, you must have the correct message center number, which you can find out from your network provider. You can check and change the message center in **Menu > Messages > SMS Settings > SIM1/SIM2 > Profile settings > Profile (Options/Edit) > SMSC address**.

While writing a message, use the # key to switch between input modes. Text messages can consist of a maximum of 612 characters (maximum of 268 characters when using accented characters).

Press the left softkey [Options] while editing a message to access the following functions:

Recipient: enter the phone number manually or from the Phonebook. After specifying the recipient, you can choose from the following menu items:

- Send to
- Edit recipient
- Remove recipient
- Remove all recipients
- Save: Save message as a draft.

**Input method:** you can choose the appropriate input method. (You can also switch between input modes by pressing the # key while writing a message).

Insert template: in this menu item, you can choose from pre-written templates and insert them into the message.

Special: Insert a phone number or name from the Phonebook.

Save: Save message to the drafts menu.

Special characters: By pressing the \* button, you can insert special characters into the message.

### Incoming messages

You can store received messages on your device or SIM card and access them from there.

When you receive a message, you will be alerted by a sound or vibration (as previously set in the menu) and an image will appear on the display. Press left soft key or OK key to view message, right soft key to return to SMS menu to read other incoming messages.

In the message list, press OK (Middle button) to view the message. By pressing the left softkey [Options], you can choose between the following options:

- Reply: You can reply directly to the message in traditional text format.
- Call sender: Calls the sender of the message directly.
- Forward: Forward a message to another recipient.
- Delete: Deletes the message
- Special: Using the Phone number/USSD code provided in the message.

- Details: in this menu item, you can view the sender's phone number, message type, reception date and storage location.

### **Drafts**

You can view unfinished, saved (While writing a message: Options/Save as draft) messages in this folder.

### **Outbox**

The device saves unsent messages in this folder.

In the message list, press OK (Middle button) to view the message.

### **Sent messages**

If the message is sent successfully, the device saves the sent message in the Sent messages folder.

### **SMS settings**

You can change the SMS service parameters:

SIM1/SIM2 specific settings (profile, validity period, delivery report, voice mail server)

- Memory status
- SMS message counter
- Allow saving of sent messages
- Preferred storage (Phone or SIM)

---

## CALL LOGS

In menu mode, you can access the Missed calls, Dialed calls, Received calls, All calls, Delete call logs, Call timers menu items by selecting the Call logs.

By opening a given call list, the following options are available:

- View - view call details.
- Call - call a given number
- Send text message - send a text message to the selected phone number.
- Save to the contacts - save a phone number to a new or existing contact. It is only visible if the phone number has not yet been saved.
- Add to the blacklist - blocking inquiries from a phone number.
- Edit before call - change phone number before call
- Delete - Delete a given item from the list

---

## CALL SETTINGS

### **Call divert**

To forward a call, in Menu mode, go to Menu > Settings > Call settings > SIM1/SIM2 Call settings > Call divert.

Select the type of forwarding (divert all voice calls, when unavailable, when no answer, when busy) and press OK, then Activate. Enter the forwarding number and press <OK>.

To cancel diverts, in Menu mode, go to Settings > Call settings > SIM1/SIM2 Call settings > Call divert, then select Cancel all diverts.

### **Call waiting**

If supported by the network, you can receive a second call during a conversation (Call Waiting function). You can deactivate the call waiting function in the device: Menu > Settings > Call settings > SIM1/SIM2 Call settings > Call waiting (Activate / Deactivate / Query status).

### **Advanced Settings**

In menu mode, go to Menu > Settings > Call settings > Advanced settings, where you can make the following settings:

- **Blacklist**

In the Blacklist menu item, you have the option to block incoming calls from the specified numbers. In the Blacklist menu, you can specify the numbers from which you do not want to receive calls. After editing the number, select Save. You can turn the function on and off in the Blacklist settings menu.

- **Call time reminder**

In this menu item, you can set the device to alert you with a sound signal of the time that has passed during the call. You can set a one-time reminder (between 1-3000 seconds) and a periodic reminder (between 30-60 seconds).

- **Rejection by SMS**

If the function is active, you have the option of rejecting an incoming call with a text message, which you can choose from the template messages.

- **Response method**

You can find a detailed description of the function in the Call reception (6.2) menu item.

---

## SETTINGS

### **Dual SIM Settings**

In this menu item, you can set which SIM cards the device uses: Only SIM1, Only SIM2, Both.

### **Phone Settings**

- **Date and time**

To set the date and time, go to Menu > Settings > Phone settings > Date and time. After setting the correct time and date, press the <OK> button to save.

In this menu item, you can specify the time and date format, as well as the automatic update option.

- **Display Language**

In Menu mode, go to Settings > Phone settings > Display Language. You can set writing language separately.

- **Writing Language**

You can select the font used for text input. If you do not change it, it is automatically set by the selected display language.

- **Shortcut keys**

You can assign functions to the central navigation button of the device. Different applications/menus can be assigned to the Up, Down, Right, Left buttons.

- **Flight Mode**

If the flight mode is turned on, the device turns off all network functions.

### **Call settings**

You can find a detailed description of the function in the Call settings (8.) menu.

### **Display**

In this menu you can customize the display according to your taste.

- **Wallpaper:** Choose a wallpaper for your phone from the pre-installed wallpapers (System) or your own files (Custom); this image is shown on the display in standby mode.
- **LCD backlight:** You can change the display brightness and standby time.
- **Keypad light setting:** You can change the keypad brightness and standby time.
- **Show date and time:** You can enable or disable the display of date and time on the home screen.

### **Security Settings**

You can change security settings in this menu, so with proper settings, your device or SIM card cannot be used by unauthorized persons.

- **SIM Security**

To change the security settings of the SIM card and phone, in menu mode, go to Settings > Security settings > SIM1/SIM2 security, where you can choose from the following menu items:

**PIN lock (Off/On):** press OK or left softkey (On/Off) to activate or deactivate. Enter the PIN code to activate the SIM PIN code. If the PIN request is activated, you must enter a PIN code each time the device is switched on. Contact your service provider for more information. Note: If you enter the wrong PIN code three times, the SIM card will be locked, which you can unlock by entering the PUK code. The PUK code is required to unblock the PIN code. The PIN and PUK code can be found in the SIM card package; otherwise, contact your service provider.

**Change PIN:** you can change the PIN code in this menu item, the new code must be entered a total of two times after entering the old code, for which a message appears on the display. The code must consist of 4-8 digits. You can only change the PIN code if the PIN code request is active.

- **Phone Security**

Press the OK button to turn Phone Lock on or off, the current status is shown by the check box at the end of the line.

To activate the phone lock, you must enter the phone password. If this function is active, the phone password must be entered every time it is switched on.

Note: the default phone password is "1122". Please change this to a unique code as soon as possible. The entered code can consist of 4-8 digits.

- **Auto keypad lock**

You can enable the automatic keypad lock and set the time after which it should turn on automatically.

### **Network Setting**

In this menu item, you can switch between automatic and manual network selection.

### **Factory data restore**

To reset the factory settings (delete all user data from the device), in menu mode go to Settings > Factory data restore. The factory reset password is "1122".

Attention! It deletes all user data from the device, the deletion cannot be undone.

---

## AUDIO PLAYER

On the player interface, press OK to select ►/|| play/pause; the left / right navigation buttons to go to the previous / next ◀/ ▶ audio file. You can adjust the volume by up / down navigation keys.

In **List / Options**, you can do the following:

- Playback,
- Update List,
- Settings (List auto gen., Repeat, Shuffle, Background play).

---

## MULTIMEDIA

### Image Viewer

In this menu you can view images stored on the device. In Menu mode, go to Multimedia > Image viewer. By pressing Options (left softkey), you can choose from the following menu items:

- View: Display images stored on the device (or SD card).
- Send: Send the selected image via Bluetooth connection.
- Use as: Set the selected image as wallpaper.
- Rename
- Delete
- Sort by (by Name, Type, Time, Size)
- Mark several
- Storage: default storage location for images (Phone, SD card)
- Image information: Name, Resolution, Size, Create time

### Video Recorder

Press the middle navigation button (Record) to start recording.

To stop recording, press the <Stop> button.

The device automatically saves the video.

### Video player

In menu mode, select Multimedia > Video player, select the video you want to watch, and start playback with the middle navigation button.

During video playback, you can use the following buttons:

Middle navigation button: start and pause playback.

Navigation key up: Turn on full-screen viewing

Navigation key down: Stop video playback.

Navigation key left and right: scroll.

Press the Options button to enable/disable Auto Repeat.

### Sound recorder

You can use the voice recorder to make a voice recording.

Select Options > New entry to start recording. You can pause and start the recording again with the left softkey. Use the right soft key to stop recording. The device saves the recording, for which a warning message appears on the display.

After the recording is completed, you can access the following options by pressing the Left soft key [Options].

- New entry: you can create a new entry.
- Playback: you can listen back to the current recording.
- List: list of saved recordings
- Settings: You can specify the save location and recording quality

---

## FM RADIO

In menu mode, go to the FM Radio menu item. For listening to the radio, connect the earphone, which functions as an antenna. If you do not connect headphones to the device, you will not be able to receive radio broadcasts.

In the FM radio application, press the left/right navigation buttons to automatically search forward/backward for channels. Use the up/down navigation keys to fine-tune the frequency.

- **Auto search**

By selecting Options > Auto search, the device searches for and saves available channels. You can view the saved channels in the Channel List menu item. Select the channel you want to play from the list, then press the center navigation key or select Options > Play.

- **Manual input**

Go to Options > Manual input, then enter the number of the channel frequency, confirm with Ok and press OK.

- **Play in the background**

To play in the background, select FM Radio > Options > Settings > Play in background.

- **Loudspeaker**

To turn on the speaker, select FM Radio > Options > Settings > Loudspeaker. The speaker can be turned off in the same menu item.

Comment:

The quality of the radio broadcast is affected by the environment. You can improve the quality by searching manually and by moving the device closer to the window.

---

## USER PROFILES

In Menu mode, go to the User Profiles menu and select the profile you want to use. There are 4 profiles in the device: General, Silent, Meeting, Outdoor.

### **Turn silent mode on and off**

Long press # to activate Silent Mode. If you press and hold the # button again, General Mode will be activated.

In Menu mode, go to User Profiles, then select Silent Mode. You can return to the General profile in the same menu item.

### **Personalize profiles**

In Menu mode, go to the User Profiles menu, then select the profile you want to modify.

To edit your profile, press [Options] and select Personalize. In this menu, you can change the following settings:

Alert Type, Ring Type, SIM1/SIM2 Ringtone, Ringtone Volume, Message Ringtone, Message Volume, Keypad, Keypone Volume, Power On/Off sound, System Alert.



---

## FILE MANAGER

In menu mode, go to the File Manager menu item. Here you can view all the files stored on the device and on the memory card (if connected). To view files, highlight the device or memory card using the navigation keys and press the Center key.

By pressing the Options button, the following options are available:

- **Open:** Opens the selected file / enters the selected folder. By pressing Options (left softkey), you can choose from other options: New folder, Rename, Delete, Sort method, Select more, Copy, Move.
- **Formatting:** Deletes all data from storage.
- **Details:** here you can see the total size of the storage and the available free space.

---

## ORGANIZER

### Calculator

In menu mode, go to Organizer > Calculator. Use the buttons corresponding to the calculator display to perform basic math operations.

### Torch

In Menu mode, go to Organizer > Torch to turn the flashlight on and off.

### Bluetooth

To turn on the Bluetooth service, go to Menu > Organizer > Bluetooth, then activate Bluetooth. The visibility of the device for other Bluetooth devices can be set with the Visibility menu item.

- **Pairing a Bluetooth device:** In the Bluetooth menu, select the My device menu item, then the Query new device option. The device creates a list of visible devices. Select the device to be paired from the list, then press the <Pair> button. After that, approve the authorization code displayed on both devices.
- **Sending files via Bluetooth:** Select the file (image, music, etc.) you want to send from the phone's applications. Go to Options > Send > Via Bluetooth, then select the receiving device and press <Select> to send.
- **Receive data via Bluetooth:** the device asks for reception, and then saves the file after confirmation.

### Calendar

To open the Calendar - in menu mode - go to Organizer > Calendar. The calendar indicates the current month, highlighting the current date in color. Use the navigation keys to move between days. Select a date and press the OK button or the left softkey [Options] to choose from the following options: Jump to date Jump to today.

---

## ALARM

In menu mode, go to the Alarm menu, where you can set 5 different alarms.

When the alarm clock sounds, press Left soft key or Stop key to stop; to snooze, press the Right soft key.

The device also wakes up when it is switched off.

To change the alarm details, select one from the list and press the Middle (Edit) button.

- **Status:** You can turn the alarm off and on in this menu item.
- **Time:** You can enter the alarm time using the numeric keypad.
- **Snooze:** the snooze time can be entered in minutes
- **Repeat:** Once, Daily, Unique
- **Alarm sound:** You can set the alarm sound.
- **Alert type:** vibration and ringing, only ringing, only vibrating modes can be selected in this menu item.

## CAMERA

Your device has a camera with which you can take photos. A memory card is required to store the images, which is not part of the basic package.

### **Taking photos**

In menu mode, select the camera option.

- Point the lens towards the subject and adjust the image.
- Use the middle navigation button to take the photo.

The device saves the image in JPG format.

### **Camera options:**

Within the camera, you can choose from the following options by pressing Options (left softkey) in the pop-up window:

- Switch to video camera: enter video recording mode.
- Photos: Go to the library of saved photos (Open Gallery).
- Camera settings: Shutter sound, Anti-flicker, Scene mode, White balance, Self-timer, Continuous exposure
- Image settings: Image size, Image quality
- Backup: Phone or Memory card
- Restore Default Settings: Resets the camera settings.

## DECLARATION OF CONFORMITY

The Blaupunkt V24 is compliant with the essential requirements and relevant provisions of RoHS Directive 2014/53/EU and 2011/65/EU. The Declaration of Conformity is available on our website.



Import: HTM Mobile Kft.

Address: 1118 Budapest, Dayka Gábor utca 3. HUNGARY